



SHIELD MegaFi 2

Software Manual

Table of Contents

Revision History	iii
1 Introduction	1
1.1 Objectives	1
1.2 Conventions.....	1
1.3 Related Documents.....	2
1.4 Abbreviations and Acronyms.....	3
1.5 About OpenWRT and Mission Control.....	5
1.6 About this Document	5
1.7 Support	5
2 Misson Control.....	7
2.1 Accessing Mission Control via Ethernet Connection	8
2.2 Initial Connection to MegaFi 2 via Wi-Fi	12
2.3 Navigating Mission Control.....	18
2.4 Working within Mission Control.....	22
3 Basic Configuration Settings	31
3.1 Changing APN (Access Point Name)	32
3.2 Changing LAN IP Address	35
3.3 Flash/Update Firmware	37
3.4 Backup Existing Configuration.....	42
3.5 Load Configuration from File	43
3.6 Change Password	46
3.7 Factory Defaults via Mission Control	48
3.8 Vehicle Shutdown Delay	50
3.9 Reboot.....	51
3.10 Wireless Settings.....	53
3.11 NAT vs. Passthrough Mode.....	63
3.12 Band Lock	68
3.13 SSH Access.....	70
3.14 GPS Output Configuration	73
3.15 WAN/LAN Port Mode	82
3.16 LCD Configuration	83
3.17 SNMP	86
3.18 Client Isolation.....	89

3.19 Failover Primary Connection92

Revision History

Rev	Iteration	Description	Incorporated By	Date
1	1	Initial Release for v3.1.6	Lorenzo Porchas	5/21/2025
1	2	Release for v3.3.x	Lorenzo Porchas	7/24/2025
1	3	Release for v3.4.x	Lorenzo Porchas	10/6/2025

1 | Introduction

The purpose of this manual is to assist the user in operating the SHIELD MegaFi 2 wireless WAN HPUE router. This manual will help the user configure and operate the device using the device's Mission Control software.

❗ For assistance in implementing or installing the MegaFi 2 device, please refer to the separate *MegaFi 2 User Manual*.

📌 **Note:** All images used in this document are used only for displaying examples of configurations and may not reflect the users' current device.

1.1 Objectives

The objectives of this document are:

- to describe the software environment and basic understanding of interacting and configuring MegaFi 2 for your use.
- to provide the necessary information to understand the device and the options available in the MegaFi 2; and
- to support implementing the necessary configuration for your communications environment and for your continued use.
- This document expects the user to have basic computer skills and to be familiar with using and navigating with a web browser, to be knowledgeable in networking concepts, and to be able to configure a traditional wired or wireless router for their communications environment.

1.2 Conventions

This document follows certain typographic conventions, outlined below:

Bold

Is used for directories, filenames, commands, and options. All terms shown in bold are typed literally.

Bold Italic

Is used to show generic arguments and options; these should be replaced with user-supplied values.

Italic

Is used to highlight comments in examples.

Constant Width

Is used to show the contents of files or the output from commands.

1.3 Related Documents

- 📄 The *MegaFi 2 User Manual*: <https://nextivityinc.com/wp-content/uploads/2024/01/SHIELD-MegaFi-2-User-Manual.pdf>
- 📄 The *MegaPortal User Manual*: <https://go.nextivityinc.com/shield-megaportal-manual>
- 📄 For other MegaFi 2 documentation, please go to <https://nextivityinc.com/products/shield-MegaFi-2-hpue/>

1.4 Abbreviations and Acronyms

The following table provides a list of abbreviations and acronyms that are referenced throughout this manual.

APN	Access Point Name	NTPD	Network Time Protocol Daemon
DHCP	Dynamic Host Configuration Protocol	PD	Prefix Delegation
DNS	Domain Name System	PID	Process Identification Number
DDNS	Dynamic Domain Name System	PIN	Personal Identification Number
GNSS	Global Navigation Satellite System	Ping	Packet Internet Groper
GPS	Global Positioning System	PoE	Power over Ethernet
HTTPS	Hypertext Transfer Protocol Secure	PPP	Point-to-Point Protocol
ICCID	Integrated Circuit Card Identifier	PPPoE	Point-to-Point Protocol over Ethernet
ICMP	Internet Control Message Protocol	RA	Route Advertisement
IGMP	Internet Group Management Protocol	SIM	Subscriber Identity Module
IMEI	International Mobile Equipment Identity	SLAAC	Stateless Address Auto Configuration
IMSI	International Mobile Subscriber Identity	SSH	Secure Shell
IP	Internet Protocol	SSID	Service Set Identifier
IPSEC	Internet Protocol Security	STP	Spanning Tree Protocol
LAN	Local Area Network	TAIP	Trimble ASCII Interface Protocol
LTE	Long-Term Evolution	TFTP	Trivial File Transfer Protocol
MAC address	Media Access Control address	UDP	User Datagram Protocol
MCBV	Modem Configuration Band Values	UTC	Coordinated Universal Time

MCLBV	Modem Configuration LTE Band Values	UUID	Universally Unique Identifier
MTU	Maximum Transmission Unit	VLAN	Virtual LAN
NAT	Network Address Translation	VPN	Virtual Private Network
NDP Proxy	Neighbor Discovery Protocol Proxy	HPUE	High Power User Equipment

1.5 About OpenWRT and Mission Control

The OpenWRT software that the MegaFi 2 system uses is an open-source project that provides a full-featured operating system for embedded devices. Nextivity's implementation of OpenWRT LuCI—the dashboard that allows you to configure and manage the MegaFi 2 suite of software and devices from a single computer—is known as Mission Control.

1.6 About this Document

This document is in 4 parts: part 1 is the Introduction, part 2 is Mission Control, part 3 Basic Configuration Settings and part 4 (forthcoming) is Expert Configuration Settings.

You are currently in the introduction. Part 2, Mission Control, provides information on accessing, navigating, and working within the system, including how to save your work. We cannot emphasize enough how important it is that you understand how to navigate and work within the system, as it is a new experience for many. Indeed, if this is your first time using this document and/or accessing the dashboard, we recommend reading it in its entirety and reaching out with any questions.

Part 3 is Basic Configuration Settings. Most users can simply use this section to complete the most frequent and basic configuration settings such as password, Wi-Fi, firmware updates, APN, IP address and others.

Part 4 (forthcoming) is Expert Configuration Settings. This is where you will view and manage your device at a more advanced level. The user can schedule tasks, configure interfaces, set firewall rules, etc.

1.7 Support

Nextivity's support desk is always ready to help you with any support issues or requests. If you encounter any problems, need clarification, or have feedback, recommendations, or suggestions, please contact us at support@nextivityinc.com.

For additional assistance: +1 (858) 485-9442 **OPTION 1**

Support Business Hours: 6:00 AM – 5:00 PM PST

We look forward to being of service.

2 | Mission Control

Mission Control is the built-in web interface that provides information about the SHIELD MegaFi 2 router and allows the user to configure settings to their preferences. All configuration and management are done via your workstation or laptop computer's web browser, and you will need to be locally connected to the device via Ethernet to a LAN port, or by utilizing its Wi-Fi capability in the admin dashboard. Remote access to Mission Control is also possible through MegaPortal. Please refer to the MegaPortal Manual for guidance on remote access to Mission Control.

2.1 Accessing Mission Control via Ethernet Connection

To access Mission Control, you will need both your **admin password** and the default factory **LAN IP, 192.168.113.1**. The password is printed on the label on the bottom of your MegaFi 2 or on the LCD display screen.

➤ **Note:** Use the defined password and/or IP address if it has been changed for your environment.

➤ **Note:** Beginning in firmware release version 3.4.1, once the default password is changed, the password will no longer be displayed on the display screen. To re-enable this device password to be displayed back on the display screen, go to section 3.16 LCD Configuration for details.

1. Connect an Ethernet cable between your workstation computer or laptop and LAN port 1 on the MegaFi 2.
2. Open a web browser to the following URL address: <https://192.168.113.1>
3. The first time you try to connect to MegaFi 2, a connection warning screen will display as shown below. Accept the connection warning by clicking on **Advanced**.

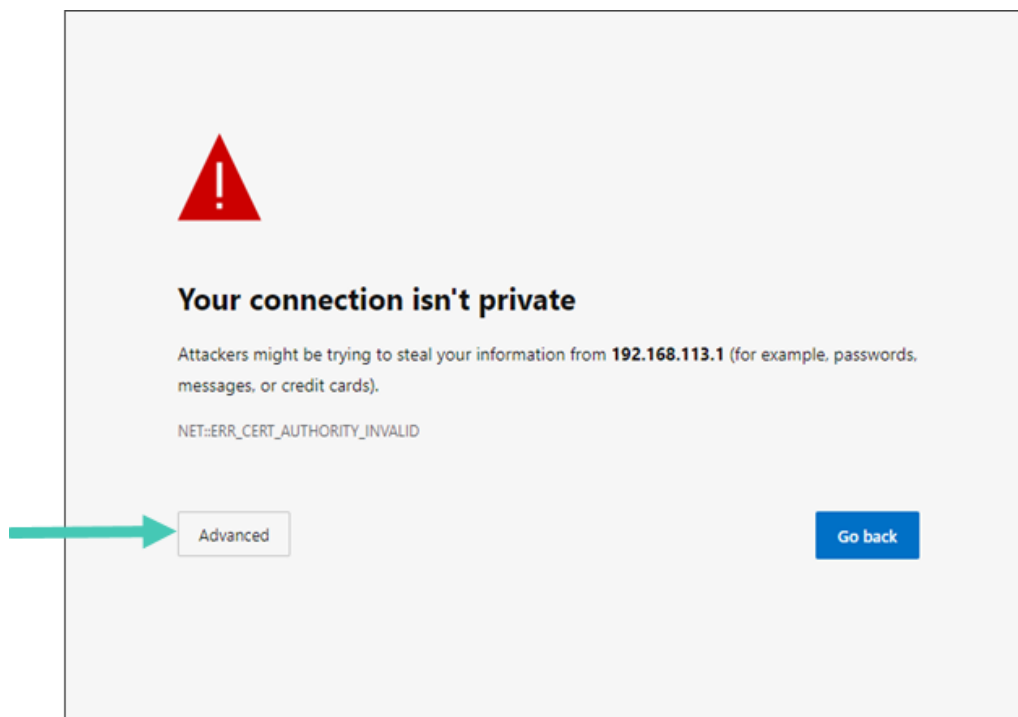


Figure 1: MegaFi 2 connection warning screen

4. A second warning screen will be displayed as shown below. Click on **Continue to 192.168.113.1 (unsafe)** link to proceed.

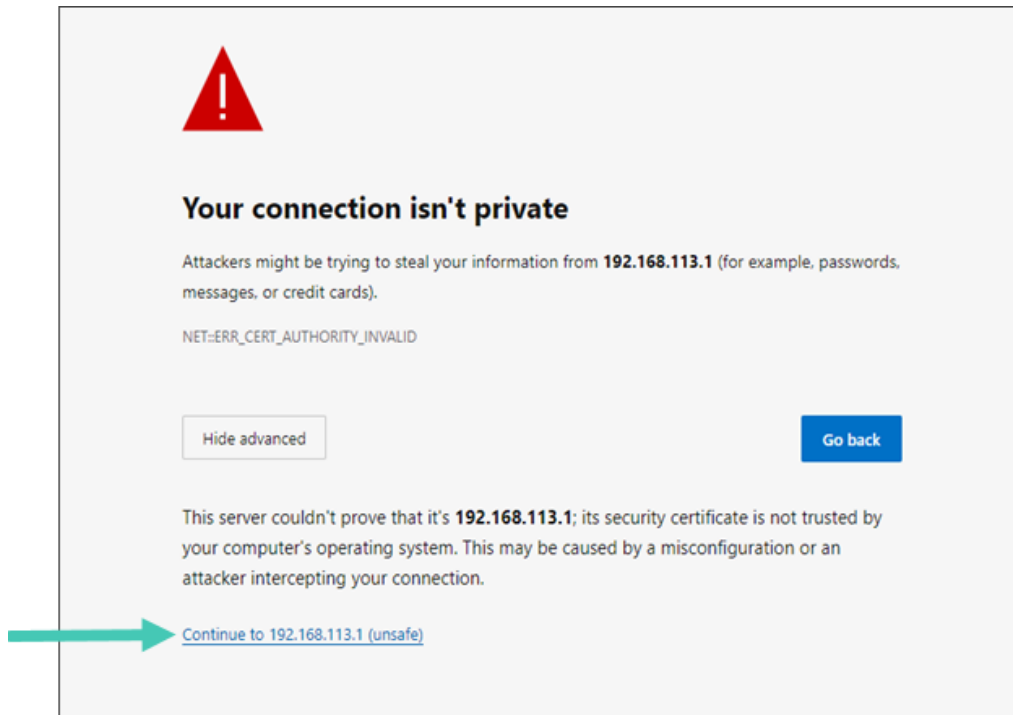


Figure 2: MegaFi 2 connection warning – second screen

5. The MegaFi 2's Mission Control GUI login page will now be displayed.
 - 5a. Enter the password as found on the bottom label or on the LCD display screen of the MegaFi 2 on the Mission Control login page.
 - 🔄 **Note:** The username always defaults to **admin**.
 - 5b. Click **Login** to proceed.

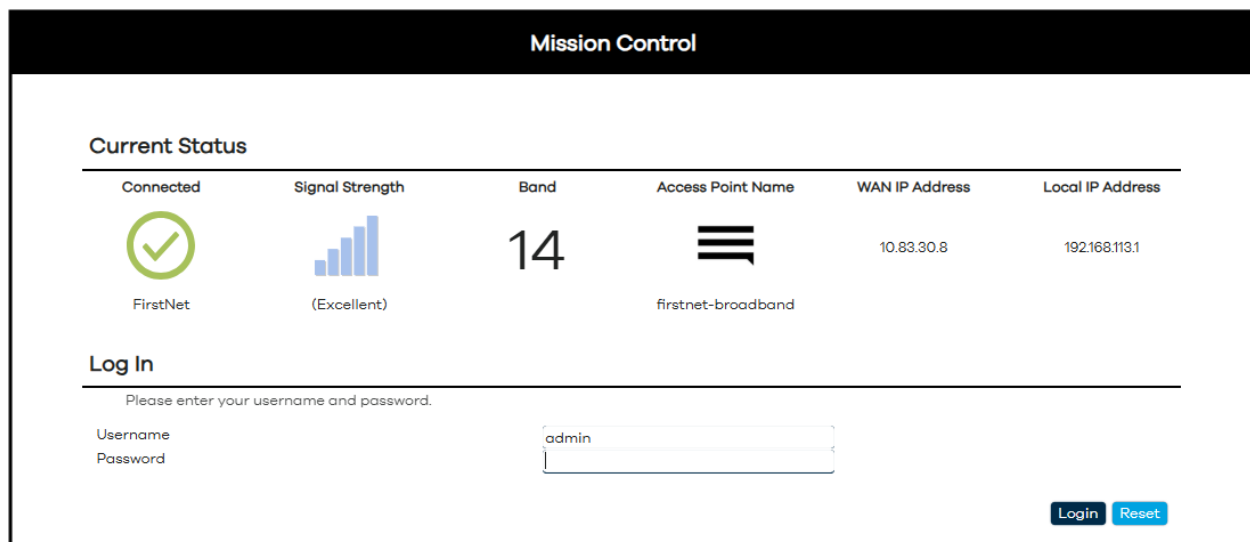


Figure 3: Mission Control Log-In screen

6. When logging in for the first time, the EULA (End User License Agreement) will be displayed.
7. Fill out the requested information and click **Accept** to continue.

End User Licence Agreement

Nextivity Inc. ("Nextivity")
End User License Agreement ("EULA")
Version Date: July 25, 2023

BY ACCEPTING THIS EULA, EITHER BY INDICATING YOUR ACCEPTANCE, BY EXECUTING A QUOTE OR ORDERING EQUIPMENT OR SERVICES DIRECTLY WITH US OR THROUGH AN APPROVED NEXTIVITY DISTRIBUTOR OR RESELLER (HOWEVER TITLED, REFERRED TO HEREIN AS AN "ORDER"), OR BY DOWNLOADING, INSTALLING AND/OR UTILIZING ANY OF THE SERVICES (DEFINED BELOW), YOU AGREE TO THE TERMS AND CONDITIONS OF THIS EULA. THIS EULA IS A LEGALLY BINDING CONTRACT BETWEEN YOU AND NEXTIVITY AND SETS FORTH THE TERMS THAT GOVERN THE LICENSES PROVIDED TO YOU HEREUNDER. IF YOU ARE ENTERING INTO THIS EULA ON BEHALF OF A COMPANY OR OTHER LEGAL ENTITY, YOU REPRESENT THAT YOU HAVE THE AUTHORITY TO BIND SUCH ENTITY TO THIS EULA. ANY CHANGES, ADDITIONS OR DELETIONS BY YOU TO THIS EULA WILL NOT BE ACCEPTED AND WILL NOT BE A PART OF THIS EULA. IF YOU DO NOT AGREE TO THIS EULA, YOU MUST NOT DOWNLOAD, INSTALL, OR USE THE SERVICES.

This Nextivity End User License Agreement ("EULA") is between Nextivity (or "we" or "us") and the user ("User" or "You" or "Your") of the Services, as defined below. This EULA applies to Your use of:

- (1) the Nextivity equipment ("Equipment");
- (2) the Nextivity on-premises, installed software that initialize and enables the Equipment ("Installed Software");
- (3) the Nextivity cloud-based software that allows You to manage and configure Your Equipment ("Cloud Software");
- (4) the written and visual materials Nextivity may provide to aid You in Your use of the Equipment, Installed Software and Cloud Software ("Documentation"); and
- (5) any training or support services performed, either remotely or in person, by Nextivity ("Support"). The Installed Software and Cloud Software may be referred to together as the "Software." The Software, Equipment, Documentation and Support may be referred to collectively as the "Services." This EULA also incorporates any Equipment-specific terms that may apply to the Equipment You acquire ("Supplemental Terms").

Section 1. Using the Services

1.1 License and Right to Use. Nextivity grants You a non-exclusive, non-transferable, non-sublicensable, revocable (a) license to use the Installed Software; (b) right to use the Cloud Software; and (c) right to use the Documentation solely in connection with Your use of the Software and Equipment, each as acquired from Nextivity or an approved reseller or distributor of Nextivity ("Approved Provider"), solely for Your internal business purposes during the Usage Term (as defined in Section 1.6 below), subject to the terms of this EULA and the applicable Order (collectively, the "Usage Rights"). Nextivity reserves all rights, title, and interest in and to the Services, including all related intellectual property rights, subject to the limited rights expressly granted hereunder.

First Name

Last Name

Company (optional)

Phone (optional)

E-Mail

Accept **Decline**

Figure 4: Nextivity, Inc. End User License Agreement screen

8. Also, as part of first-time login to MegaFi 2, the user will be required to change the default login password.
 - 8a. Proceed to change the default password to a 'Strong' password in the **Password** field.

➡ **Note:** The device will not accept weak passwords. Password must meet the following requirements: a minimum length of 10 characters and a randomized complexity of lowercase letters, uppercase letters, and numbers.
 - 8b. Confirm the new password in the **Confirmation** field, then click on **Save**.

Figure 5: Change Router Password screen

9. The user will now be redirected to Mission Control's Overview page.

Device	
Model	SHIELD MegaFi 2
Serial Number	250601000632
IMEI	359172391063678
Phone Number	858.914.8261
ICCID (SIM)	89011003330143979960
ESIMID	89049032000001000000212988270921
Uptime	1d 20h 2m 50s
Cloud Connection Status	Connected (7/24/2025, 10:44:10 AM)
TX Bytes (since last power cycle)	218.75 MB (742319 Pkts.)
RX Bytes (since last power cycle)	1.39 GB (1627490 Pkts.)
Memory Used	74.46 MiB / 235.02 MiB (31%)
Location (Lat, Lon)	0.000000, 0.000000

Modem Status	
Connection Mode	5G
Home Network	FirstNet
Current SIM in use	physical SIM
Current APN in use	firstnet-broadband

LTE		5G
Connection Status	Connected	Not connected
Band	14	
CID (Serving Cell ID)	79474863	
PCI (Physical Cell ID)	388	
Bandwidth	10	
RSRP	-88	
RSRQ	-9	
RSSI	-60	
TX Power	21	
MIMO status	4x4-MIMO	not_attach

DHCP Leases			
Active DHCPv4 Leases			
Hostname	IPv4 address	MAC address	Lease time remaining

Figure 6: Mission Control – Overview page

10. First-time router configuration is now complete!

2.2 Initial Connection to MegaFi 2 via Wi-Fi

To access Mission Control, you will need both your **admin password**, and the default factory **LAN IP, 192.168.113.1**. The password is printed on the label on the bottom of your MegaFi 2 or on the LCD display screen.

Notes:

- Use the defined password and/or IP address if it has been changed for your environment.
- The example shown below was accomplished using a Windows (10/11) PC. The steps should be similar using a different OS.
- Handheld devices can automatically connect to MegaFi 2's Wi-Fi by scanning the QR code from the LCD Display screen, but it may become difficult to configure certain settings. Therefore, it is highly recommended to configure settings using a computer workstation or laptop.

To connect to MegaFi 2 via Wi-Fi using a PC:

1. Go into your PC's **Network & internet > Wi-Fi** settings to add a new Wi-Fi connection.
2. Select your MegaFi 2 device by looking for its default SSID under **Show available networks** by selecting it. The default SSID and its password are printed on the device's label located underneath the device or it can be found on the LCD display screen.



Figure 7: Windows network & internet window showing list of available Wi-Fi networks

3. The **Connect automatically** box may or may not be checked by default. Select as desired then click on **Connect**.



Figure 8: Wi-Fi Network Connection – Connect automatically option

4. Enter the network security key (default SSID password), then click on **Next**.

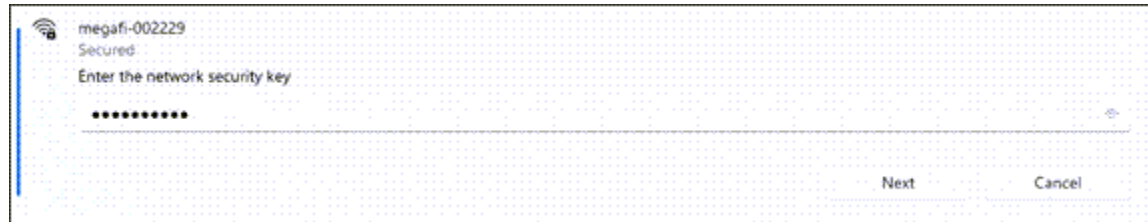


Figure 9: Wi-Fi Network Connection – Enter network security key

5. If the connection is successful, it will say **Connected, secured**.



Figure 10: Wi-Fi Network Connection – Successful connection

6. Open a web browser to the following URL address: <https://192.168.113.1>
7. The first time you try to connect to MegaFi 2, a connection warning screen will display as shown below. Accept the connection warning by clicking on **Advanced**.

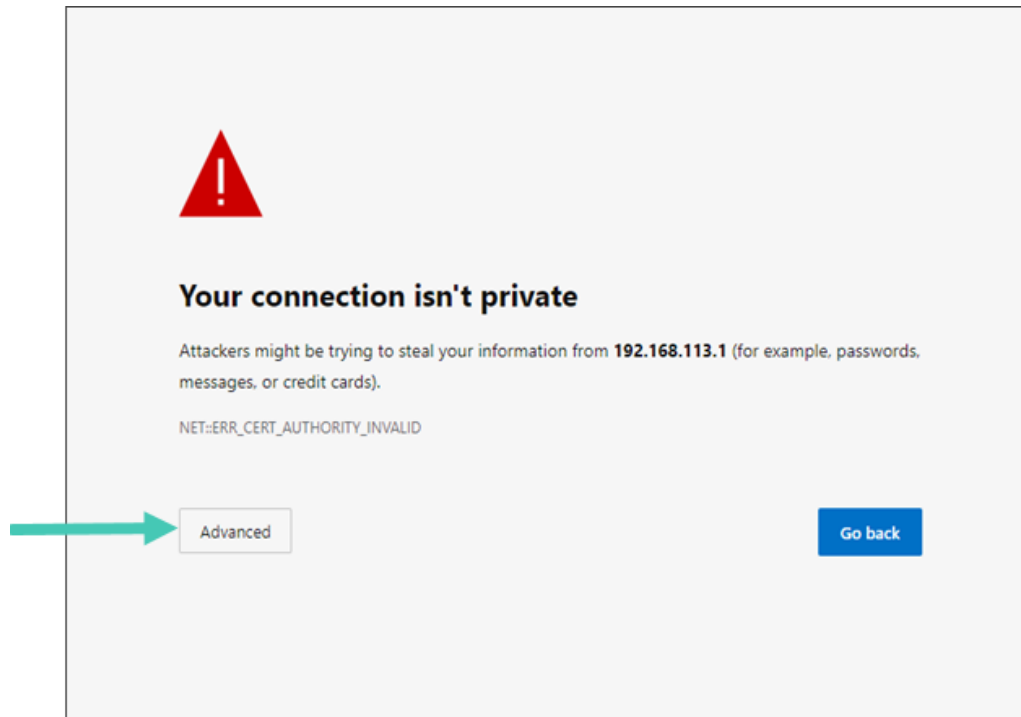


Figure 11: Warning message – Connection not private

8. A second warning screen will be displayed as shown below. Click on **Continue to 192.168.113.1 (unsafe)** link to proceed.


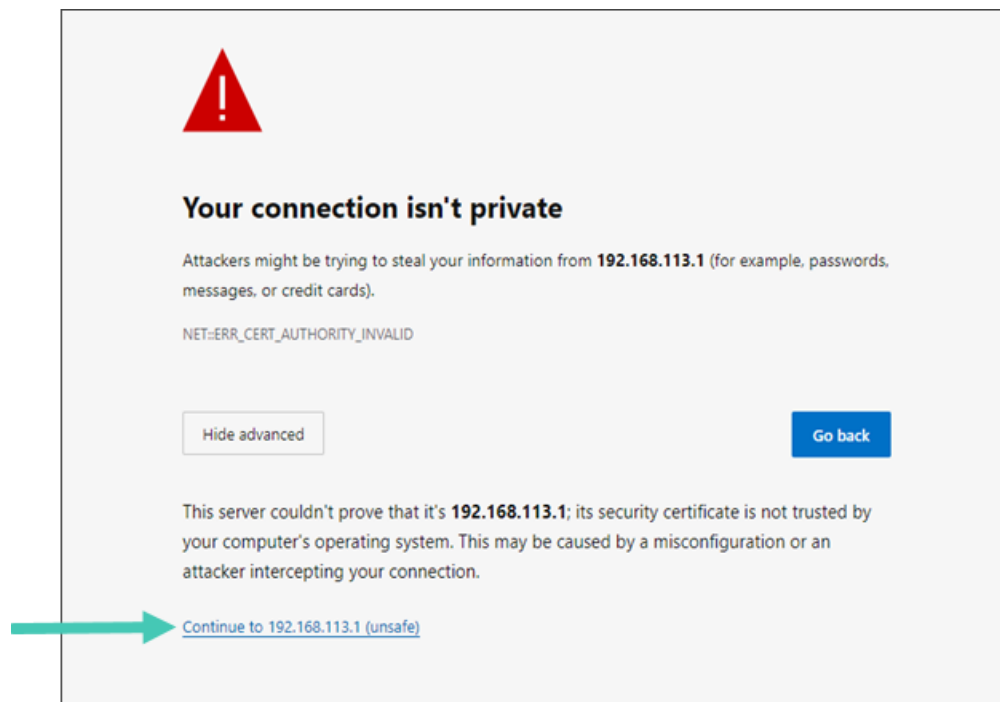


Figure 12: Warning message – Continue to IP address

9. The MegaFi 2's Mission Control GUI login page will now be displayed.
 - 9a. Enter the password as found on the bottom label or on the LCD display of the MegaFi 2 on the Mission Control login page.
 - 🔗 **Note:** The username always defaults to **admin**.
 - 9b. Click **Login** to proceed.

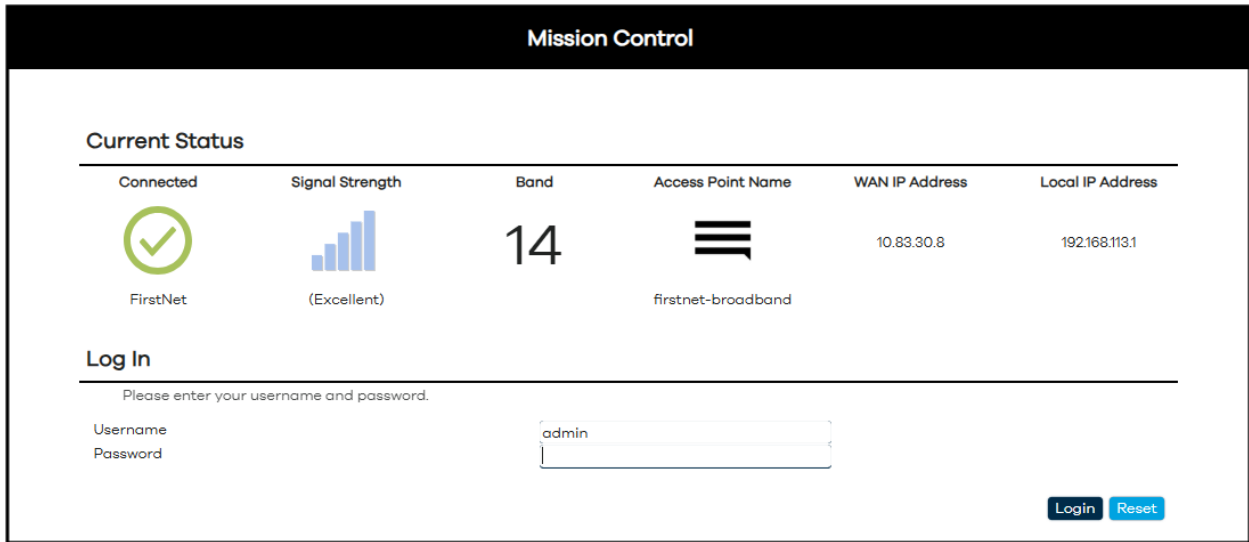

The image shows the Mission Control GUI login page. At the top, there's a black header with "Mission Control" in white. Below that, the "Current Status" section displays various network metrics: "Connected" with a green checkmark icon, "Signal Strength" with a bar chart icon and "(Excellent)" text, "Band" with the number "14", "Access Point Name" with a Wi-Fi icon and "firstnet-broadband" text, "WAN IP Address" with "10.83.30.8", and "Local IP Address" with "192.168.113.1". Below this is the "Log In" section with the instruction "Please enter your username and password." It features two input fields: "Username" (containing "admin") and "Password" (empty). At the bottom right of the login section are "Login" and "Reset" buttons.

Connected	Signal Strength	Band	Access Point Name	WAN IP Address	Local IP Address
 FirstNet	 (Excellent)	14	 firstnet-broadband	10.83.30.8	192.168.113.1

Log In
Please enter your username and password.

Username:

Password:

[Login](#) [Reset](#)

Figure 13: Mission Control – Log In page

10. When logging in for the first time, the EULA (End User License Agreement) will be displayed.
 - 10a. Fill out the requested information and click **Accept** to continue.

End User Licence Agreement

Nextivity Inc. ("Nextivity")
End User License Agreement ("EULA")

Version Date: July 25, 2023

BY ACCEPTING THIS EULA, EITHER BY INDICATING YOUR ACCEPTANCE, BY EXECUTING A QUOTE OR ORDERING EQUIPMENT OR SERVICES DIRECTLY WITH US OR THROUGH AN APPROVED NEXTIVITY DISTRIBUTOR OR RESELLER (HOWEVER TITLED, REFERRED TO HEREIN AS AN "ORDER"), OR BY DOWNLOADING, INSTALLING AND/OR UTILIZING ANY OF THE SERVICES (DEFINED BELOW), YOU AGREE TO THE TERMS AND CONDITIONS OF THIS EULA. THIS EULA IS A LEGALLY BINDING CONTRACT BETWEEN YOU AND NEXTIVITY AND SETS FORTH THE TERMS THAT GOVERN THE LICENSES PROVIDED TO YOU HEREUNDER. IF YOU ARE ENTERING INTO THIS EULA ON BEHALF OF A COMPANY OR OTHER LEGAL ENTITY, YOU REPRESENT THAT YOU HAVE THE AUTHORITY TO BIND SUCH ENTITY TO THIS EULA. ANY CHANGES, ADDITIONS OR DELETIONS BY YOU TO THIS EULA WILL NOT BE ACCEPTED AND WILL NOT BE A PART OF THIS EULA. IF YOU DO NOT AGREE TO THIS EULA, YOU MUST NOT DOWNLOAD, INSTALL, OR USE THE SERVICES.

This Nextivity End User License Agreement ("EULA") is between Nextivity (or "we" or "us") and the user ("User" or "You" or "Your") of the Services, as defined below. This EULA applies to Your use of:

- (1) the Nextivity equipment ("Equipment");
- (2) the Nextivity on-premises, installed software that initialize and enables the Equipment ("Installed Software");
- (3) the Nextivity cloud-based software that allows You to manage and configure Your Equipment ("Cloud Software");
- (4) the written and visual materials Nextivity may provide to aid You in Your use of the Equipment, Installed Software and Cloud Software ("Documentation"); and
- (5) any training or support services performed, either remotely or in person, by Nextivity ("Support"). The Installed Software and Cloud Software may be referred to together as the "Software." The Software, Equipment, Documentation and Support may be referred to collectively as the "Services." This EULA also incorporates any Equipment-specific terms that may apply to the Equipment You acquire ("Supplemental Terms").

Section 1. Using the Services

1.1 License and Right to Use. Nextivity grants You a non-exclusive, non-transferable, non-sublicensable, revocable (a) license to use the Installed Software; (b) right to use the Cloud Software; and (c) right to use the Documentation solely in connection with Your use of the Software and Equipment, each as acquired from Nextivity or an approved reseller or distributor of Nextivity ("Approved Provider"), solely for Your internal business purposes during the Usage Term (as defined in Section 3.6 below), subject to the terms of this EULA and the applicable Order (collectively, the "Usage Rights"). Nextivity reserves all rights, title, and interest in and to the Services, including all related intellectual property rights, subject to the limited rights expressly granted hereunder.

First Name

Last Name

Company (optional)

Phone (optional)

E-Mail

Figure 14: Nextivity, Inc. End-User License Agreement (EULA)

11. Also, as part of first-time login to MegaFi 2, the user will be required to change the default login password.

11a. Proceed to change the default password to a 'Strong' password in the **Password** field.

➤ **Note:** The device will not accept weak passwords. Password must meet the following requirements: a minimum length of 10 characters and a randomized complexity of lowercase letters, uppercase letters, and numbers.

12. Confirm the new password in the **Confirmation** field, then click on **Save**.

Figure 15: Change Router Password screen

13. The user will now be re-directed to Mission Control's Overview page.

Device		
Model	SHIELD MegaFi 2	
Serial Number	250601000632	
IMEI	359172391063678	
Phone Number	858.914.8261	
ICCID (SIM)	89011003330143979960	
ESIMID	89049032000001000000212986270921	
Uptime	1d 20h 2m 50s	
Cloud Connection Status	Connected (7/24/2025, 10:44:10 AM)	
TX Bytes (since last power cycle)	218.75 MB (742319 Pkts.)	
RX Bytes (since last power cycle)	1.39 GB (1627490 Pkts.)	
Memory Used	74.46 MiB / 235.02 MiB (31%)	
Location (Lat, Lon)	0.000000,0.000000	

Modem Status		
Connection Mode	5G	
Home Network	FirstNet	
Current SIM in use	physical SIM	
Current APN in use	firstnet-broadband	

Networking		
Connection Status	LTE	5G
Band	14	Not connected
CID (Serving Cell ID)	79474863	
PCI (Physical Cell ID)	388	
Bandwidth	10	
RSRP	-88	
RSRQ	-9	
RSSI	-60	
TX Power	21	
MIMO status	4x4-MIMO	not_attach

DHCP Leases			
Active DHCPv4 Leases			
Hostname	IPv4 address	MAC address	Lease time remaining

Figure 16: Mission Control – Overview page

14. First-time router configuration is now complete!

2.3 Navigating Mission Control

Once logged into Mission Control, the first page the user will see is the **Overview** page.

Overview

Device

Networking

DHCP Leases

Interfaces

System Settings

Logout

Refreshing

Mission Control

Network Mode: NAT

Overview

Device

Model	SHIELD MegaFi 2	
Serial Number	250601000632	
IMEI	359172391063678	
Phone Number	858.914.8261	
ICCID (SIM)	89011003330143979960	
ESIMID	89049032000001000000212986270921	
Uptime	1d 20h 2m 50s	
Cloud Connection Status	Connected (7/24/2025, 10:44:10 AM)	
TX Bytes (since last power cycle)	218.75 MB (742319 Pkts.)	
RX Bytes (since last power cycle)	1.39 GB (1627490 Pkts.)	
Memory Used	74.46 MiB / 235.02 MiB (31%)	
Location (Lat, Lon)	0.000000,0.000000	

Modem Status

Connection Mode	5G	
Home Network	FirstNet	
Current SIM in use	physical SIM	
Current APN in use	firstnet-broadband	
Connection Status	LTE	5G
Band	Connected	Not connected
CID (Serving Cell ID)	14	
PCI (Physical Cell ID)	79474863	
Bandwidth	388	
RSRP	10	
RSRQ	-88	
RSSI	-9	
TX Power	-60	
MIMO status	21	
	4x4-MIMO	not_attach

Networking

DHCP Leases

Active DHCPv4 Leases

Hostname	IPv4 address	MAC address	Lease time remaining
----------	--------------	-------------	----------------------

Figure 17: Mission Control – Overview page

2.3.1 Top Banner

The top banner area, which is consistently displayed on every navigation page, will show the current Network mode and cellular signal strength information towards the top right area.

 


Figure 18: Mission Control – top banner

Network Mode	▪ NAT (default) or Passthrough
Signal Strength	▪ The number of cellular signal strength bars that should match up with the bars on the device LCD Display screen.

2.3.2 Navigation Pane

The navigation pane on the left consists of a two-level menu system:

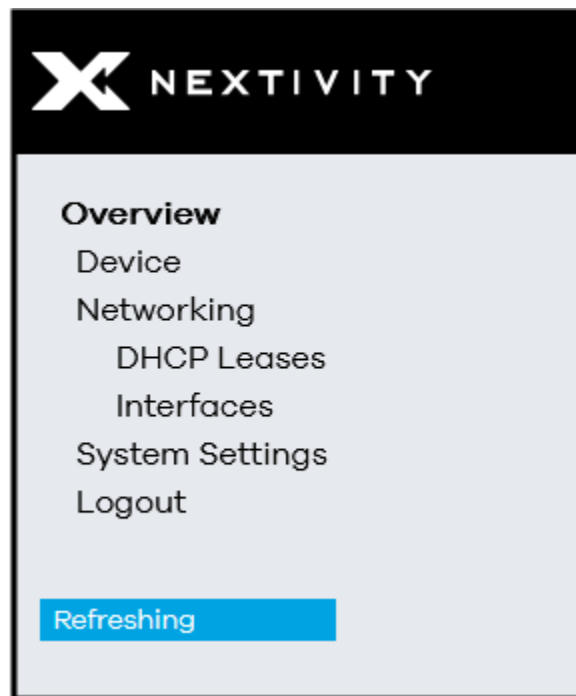


Figure 19: Mission Control Navigation Pane – Overview menu

a: In the main **Overview** page, the Top-level menu section consists of four on-page topics: **Device**, **Networking**, **System Settings**, and **Logout**.

b: If any, the second-level sub-menu contains on-page quick links.

For example, Figure 19 shows the top-level **Networking** menu item with its second-level sub-menu items of **DHCP Leases** and **Interfaces**. Clicking on any of those options will take you to that area of the current Top-level selection.

c: Selecting the **Logout** option will log you out of Mission Control.

When the user navigates into Expert Configuration mode by clicking on the **Expert Configuration** button, located in the **System Settings** under **Admin Tools**, the navigation pane on the left exposes different selectable options and lands the user inside the **General** page (Second-level page) under **Status** (Top-level menu).

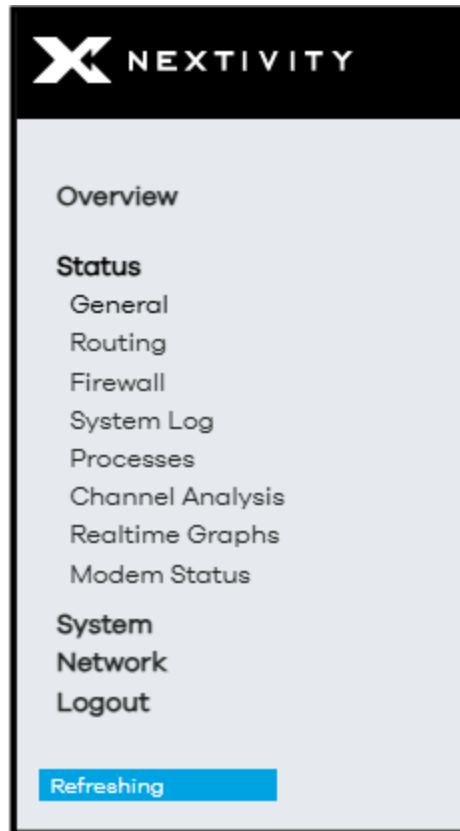


Figure 20: Mission Control Navigation Pane – Expert Configuration mode menu

- d:** There is a link back to the main **Overview** page at the top. Click on it to go back to the main **Overview** page.
- e:** The Top-level menu section consists of four new topics with links to different pages under each: **Status**, **System**, **Network**, and **Logout**.
- f:** If any, the second-level sub-menu in this area contains a variable number of page links.
For example, Figure 20 shows the top-level **Status** menu item with its second-level sub page links to **General**, **Routing**, **Firewall**, **System Log**, **Processes**, **Channel Analysis**, etc. Clicking on any of those page link options will take you to that page of the current Top-level selection.
- g:** Selecting the **Logout** option will log you out of Mission Control.

2.4 Working within Mission Control

When working within Mission Control, you will need to perform actions such as **Edit**, **Save**, **Discard**, **Reset**, etc. To both ease this process and to ensure efficiency of workflow, changes made are stored as **Unapplied Changes** rather than being actioned and implemented immediately. In doing so, if your workflow is interrupted or if you inadvertently navigate away from a page without applying your changes, any work done to date is not discarded and accidentally lost.

Subsequently, when you are ready to apply these unapplied changes, they can either be saved and applied, reset/discarded, or revert/cancelled in one stroke rather than piecemeal, one at a time. This process also lets you check, verify, and manage the list of queued changes prior to updating the system, and, depending on the changes required, avoids slowing your workflow.

2.4.1 Save Options

Within Mission Control, all changes and saves must be applied manually—there are no automatic save or apply options. Typically, there are three save options: **Save**, **Save & Apply**, and **Apply Unchecked**; plus, non-save options such as **Reset**, **Dismiss**, **Revert**, etc.

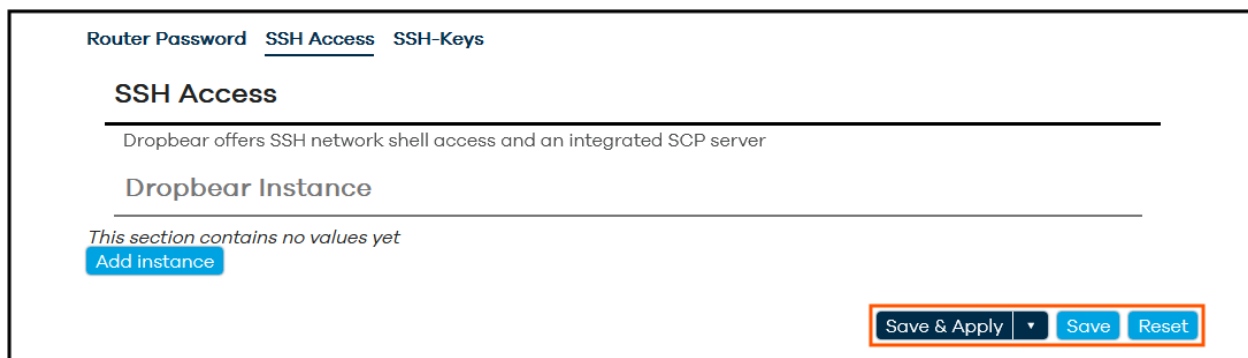


Figure 21: Mission Control – Save options

The action buttons you see will depend on where you are in the system and what changes you have made. We will look at these in more detail below, starting with **Save**.

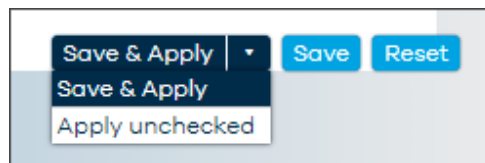


Figure 22: Mission Control – Save options

2.4.2 Save

Though the **Overview** page presents most of the basic admin functionality in a single scrolling page, you may need to navigate between, and make changes to, multiple pages within Mission Control itself. The **Save** button allows you to save your changes as you go. In contrast, without this save option, if you navigated away from a page without saving your changes, these would then be discarded and lost, and current applied settings and values would remain unchanged. However, it is important to note that saving changes *does not* apply/commit them to the system (i.e., no updates occur as a result of saving changes).

Instead, saving any changes adds them as pending to the Unapplied Changes list as shown below.

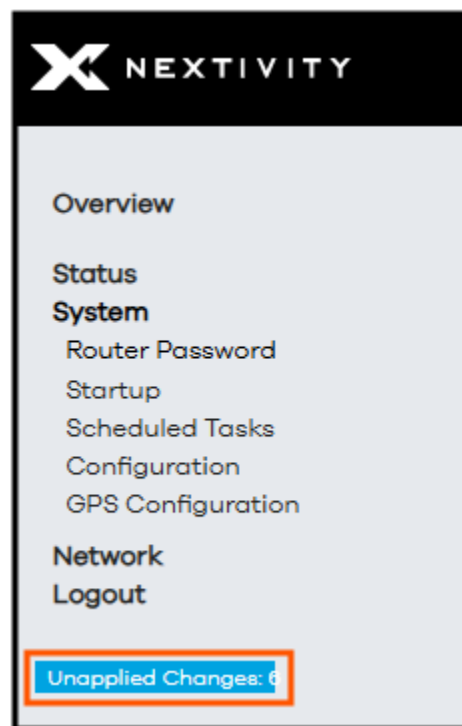


Figure 23: Navigation pane showing pending Unapplied Changes

Once saved as **Unapplied Changes**, you can then:

- carry out additional work on the current page or navigate away to a different page and continue your tasks until you are ready to apply all changes.
- manage your unapplied changes.
- save and apply your unapplied changes.

2.4.3 Managing Unapplied Changes

To view or manage your unapplied changes:

1. Click on the **Unapplied Changes** button and the **Configuration/Changes** dialog will show, listing all queued changes as shown below. Also, the status of each item is indicated by its color, per the legend.
2. From here, you have several buttons: **Close**, **Save & Apply** (**Apply unchecked** is in the drop-down menu), and **Revert** or **Reset**

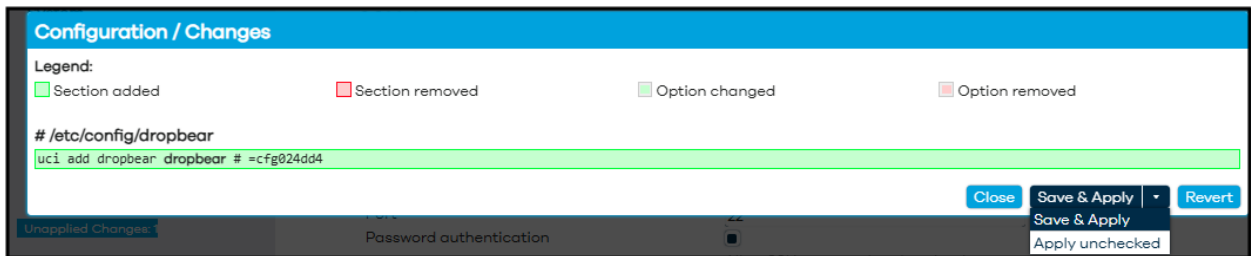


Figure 24: Configuration/Changes showing button options

- 2a. **Close** – will close this dialog window.
- 2b. **Save & Apply** – will apply the changes, clear the Configuration/Changes list, close the dialog window, and you will then see the Apply configuration changes countdown popup.
 - **Note:** Unlike performing a **Save & Apply** from the main dashboard, because these items have already been saved once (the initial save added them to the unapplied changes queue), no second click is required to initiate these changes. A single click on the **Save & Apply** button will commit all changes and the countdown will commence.
- 2c. **Revert/Reset** will cancel all unapplied changes, clears the list of any pending changes, and displays the “changes have been reverted” message as a popup, and then takes you back to the Mission Control dashboard where all settings remain unchanged.

2.4.4 Save & Apply

When you are ready to apply your unapplied changes, click on **Save & Apply**. This will then apply all unapplied changes to the system and update your current configuration.

- ✖ **IMPORTANT:** Please allow adequate time for changes to update and ensure continuous power is supplied to the MegaFi 2 during any updates.

2.4.5 Apply Unchecked

When updating certain attributes, such as the LAN IP address or other configurations, there is often a time delay between events, (e.g., a change in the LAN IP that uses DHCP) so there may be a delay between connecting to the new IP and subsequent assignment of new DHCP addresses. In such cases, the system will attempt to check that both communication and function are maintained. However, if, during this check, the system determines that either would be lost because of the change, it will trigger the “**Configuration has been rolled back!**” alert. **Apply unchecked** allows us to avert this by applying pending changes without performing communication and function checks.

1. Click on the **Save & Apply** button arrow and the popup, as shown below, will open.
2. Click on **Apply unchecked** and the dropdown will close, the button label will change to **Apply unchecked**, and the button color will change to **red** as shown below.
3. A second click, on the now **Apply unchecked** button, will apply the changes and the Applying configuration changes countdown will initiate.

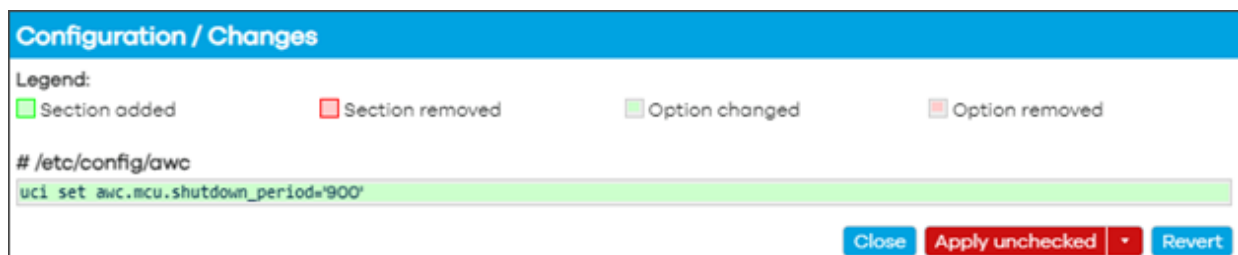


Figure 25: Configuration/Changes showing applied configuration changes

2.4.5.1 Cancelling Apply Unchecked

To cancel the **Apply unchecked** button (and revert to the default **Save & Apply**):

1. Click on the arrow on the **Apply unchecked** button to display the popup as shown above.
2. Click on **Save & Apply**. The button’s label will revert to **Save & Apply**, and the button’s color will change to blue.

2.4.6 Reset or Revert

Clicking on **Reset** or **Revert** will cancel all unapplied changes, clear this list, return on-page settings to their current values, and leave the current settings and configuration in their present state.

2.4.7 Overview Page

As previously pointed out above, the top-level menu, the user can see direct links to **Device**, **Networking**, **System Settings** all listed in the left-hand pane and detailed information and statistics for each of these pages within the main window. The **Logout** button function is also listed at the bottom.

Overview

Device

Model	SHIELD MegaFi 2
Serial Number	250601000632
IMEI	359172391063678
Phone Number	858.914.8261
ICCID (SIM)	89011003330143979960
ESIMID	890490320000010000000212986270921
Uptime	1d 20h 2m 50s
Cloud Connection Status	Connected (7/24/2025, 10:44:10 AM)
TX Bytes (since last power cycle)	218.75 MB (742319 Pkts.)
RX Bytes (since last power cycle)	1.39 GB (1627490 Pkts.)
Memory Used	74.46 MiB / 235.02 MiB (31%)
Location (Lat, Lon)	0.000000, 0.000000

Modem Status

Connection Mode	5G
Home Network	FirstNet
Current SIM in use	physical SIM
Current APN in use	firstnet-broadband

	LTE	5G
Connection Status	Connected	Not connected
Band	14	
CID (Serving Cell ID)	79474863	
PCI (Physical Cell ID)	388	
Bandwidth	10	
RSRP	-88	
RSRQ	-9	
RSSI	-60	
TX Power	21	
MIMO status	4x4-MIMO	not_attach

Networking

DHCP Leases

Active DHCPv4 Leases

Hostname	IPv4 address	MAC address	Lease time remaining
----------	--------------	-------------	----------------------

Figure 26: Mission Control – Overview page

The user may need to scroll down the main window to see all that is presented under **Overview**. Each of these areas are detailed below.

2.4.7.1 Device

For a detailed summary of the device, view the **Device** section. Right below is the **Modem Status** area for **Connection Mode** and **Connection Status**, as well as cellular network information and other statistics.

Nextivity Mission Control Network Mode: NAT

Overview

- Device** (highlighted)
- Networking
- DHCP Leases
- Interfaces
- System Settings
- Logout

Refreshing

Overview

Device

Model	SHIELD MegaFi 2
Serial Number	250601000632
IMEI	359172391063678
Phone Number	858.914.8261
ICCID (SIM)	89011003330143979960
ESIMID	890490320000010000000212986270921
Uptime	1d 20h 9m 38s
Cloud Connection Status	Connected (7/24/2025, 10:50:17 AM)
TX Bytes (since last power cycle)	219.81 MB (746713 Pkts.)
RX Bytes (since last power cycle)	1.40 GB (1632912 Pkts.)
Memory Used	73.22 MiB / 235.02 MiB (31%)
Location (Lat,Lon)	0.000000,0.000000

Modem Status

Connection Mode	5G+
Home Network	FirstNet
Current SIM in use	physical SIM
Current APN in use	firstnet-broadband

	LTE	5G
Connection Status	Connected	Not connected
Band	14	
CID (Serving Cell ID)	79474863	
PCI (Physical Cell ID)	388	
Bandwidth	10	
RSRP	-87	
RSRQ	-9	
RSSI	-60	
TX Power	24	
MIMO status	2x2-MIMO	not_attach

Figure 27: Mission Control – Device

2.4.7.2 Networking

Clicking on **Networking** on the left-hand menu, the main window displays detailed information for **DHCP Leases** for connected hosts and **Interfaces: LAN, WAN, WAN6, WWAN, and Active Connections**.

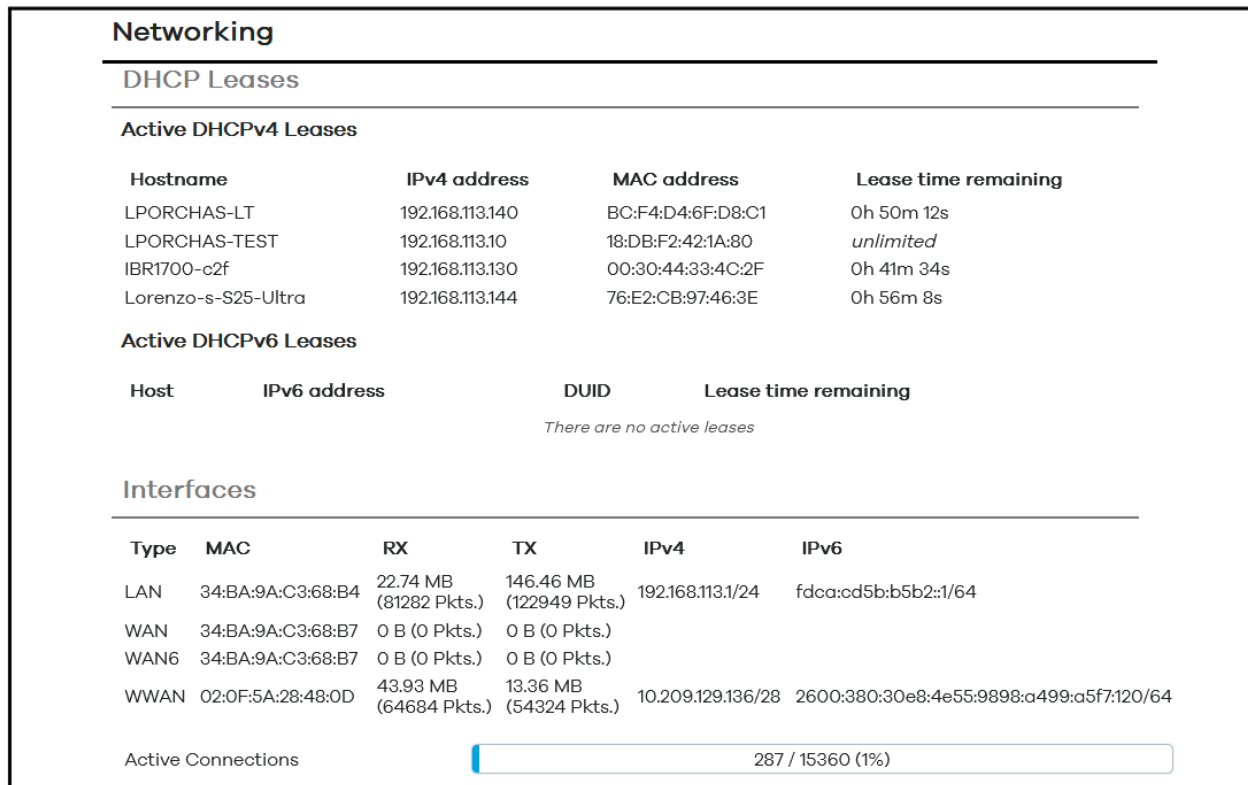


Figure 28: Mission Control – Networking

2.4.7.3 System Settings

Clicking on **System Settings** on the left-hand menu, the main window displays Admin Tools for:

- **Primary SIM**
- **Physical SIM APN selection**
- **Physical SIM custom APN**
- **LAN IP**
- **WAN/LAN Port Mode**
- **Update Firmware**
- **Backup Existing Configuration**
- **Load Configuration from File**
- **Change Password**
- **Factory Defaults**
- **Vehicle Shutdown Delay**
- **Expert Configuration**
- **Reboot**

The user has complete access to all these configuration features from this environment without needing to be in **Expert Configuration** mode.

Further details on how to use these settings will be discussed later in this document.

The screenshot shows the 'Admin Tools' section with a sub-header 'System Settings'. Below this, there is a list of configuration options on the left and their corresponding values or actions on the right. The options include Primary SIM, Physical SIM APN selection, Physical SIM custom APN, LAN IP, WAN/LAN Port Mode, Update Firmware, Backup Existing Configuration, Load Configuration from File, Change Password, Factory Defaults, Vehicle Shutdown Delay, Expert Configuration, and Reboot. At the bottom right, there are three buttons: 'Save & Apply', 'Save', and 'Reset'.

Setting	Value/Action
Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Upload Firmware
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

Save & Apply Save Reset

Figure 29: Mission Control – System Settings

2.4.7.4 Logout

The user can log out of Mission Control by clicking on this button. This button is always visible in either Overview or Expert Configuration Mode located on the lefthand pane towards the bottom.

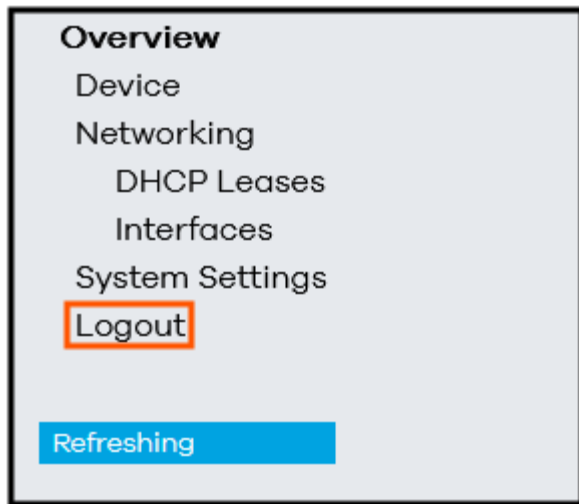


Figure 30: Logout from Overview mode

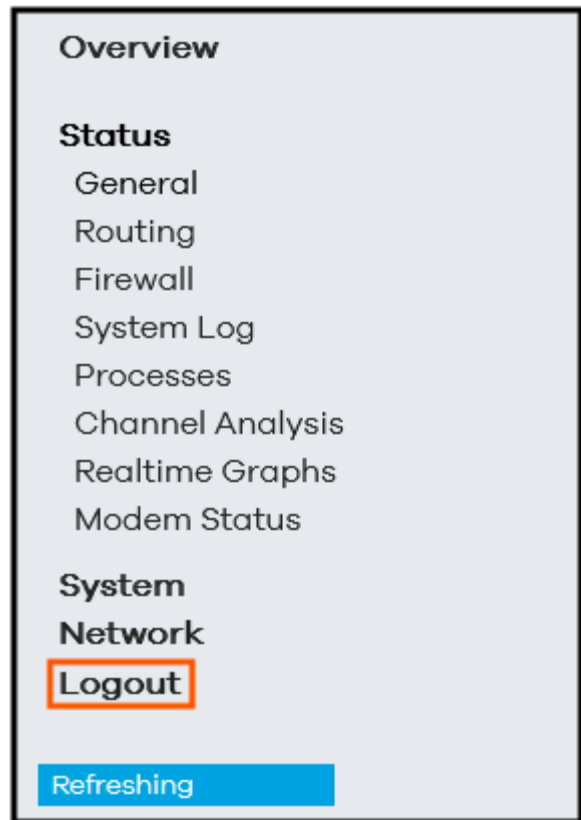


Figure 31: Logout from Expert Configuration mode

3 | Basic Configuration Settings

This section details the most frequent configuration settings that typical users need to make. Most users can simply use this section to complete the most frequent and basic configuration settings such as password, Wi-Fi, firmware updates, APN, IP address and others.

3.1 Changing APN (Access Point Name)

By default, the **Physical SIM APN selection** is set to **Automatic** and the **Physical SIM custom APN** will automatically detect and configure itself when a **firstnet-broadband** or an Enterprise (**broadband**) SIM is installed. If the user has a custom APN SIM card, do the following to manually change the **Physical SIM custom APN** in Mission Control:

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click the drop-down menu next to **Physical SIM APN selection** and select **Custom**.
3. Click on the **Save & Apply** button at the bottom to confirm the change.

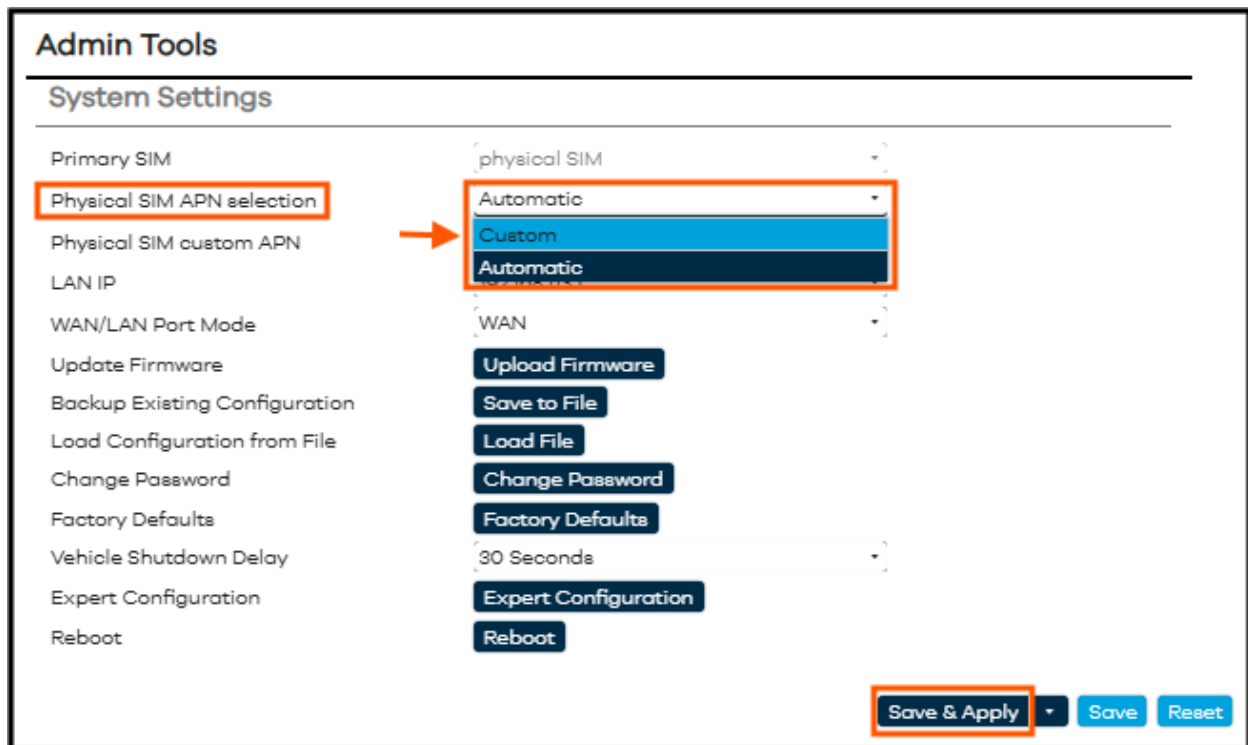


Figure 32: System Settings – Physical SIM APN selection

4. Now click the drop-down menu next to **Physical SIM custom APN** and click inside the custom field.
5. Correctly type in the APN name associated with the SIM card into the custom field and hit **Enter**. Otherwise, it will revert to its default setting, or pre-configured APN.
6. Click on the **Save & Apply** button at the bottom to confirm the change.

The screenshot shows the 'Admin Tools' interface with the 'System Settings' tab selected. On the left is a sidebar menu with options: Primary SIM, Physical SIM APN selection, Physical SIM custom APN (highlighted with an orange box), LAN IP, WAN/LAN Port Mode, Update Firmware, Backup Existing Configuration, Load Configuration from File, Change Password, Factory Defaults, Vehicle Shutdown Delay, Expert Configuration, and Reboot. An orange arrow points from the 'Physical SIM custom APN' menu item to the main configuration area. In the main area, the 'Physical SIM' dropdown is set to 'physical SIM', and the 'Physical SIM APN selection' dropdown is set to 'Custom'. Below this, a text input field contains 'undefined' and a dropdown menu shows '-- custom --' (highlighted with an orange box). Below the input field are buttons: 'Upload Firmware', 'Save to File', 'Load File', 'Change Password', 'Factory Defaults', 'Expert Configuration', and 'Reboot'. At the bottom right, there are three buttons: 'Save & Apply' (highlighted with an orange box), 'Save', and 'Reset'.

Figure 33: System Settings – Physical SIM custom APN

7. Give the device a few minutes to successfully regain network connectivity.
8. After the device becomes available, issue a **Reboot** so the device receives the correct IP address and any other provisioned network settings. See Section 3.9 for Reboot procedure.
9. To validate the custom IP address associated with your custom APN, navigate to **Overview > Networking** and verify the **WWAN IPv4** address under **Interfaces** and make sure it is what you are expecting.

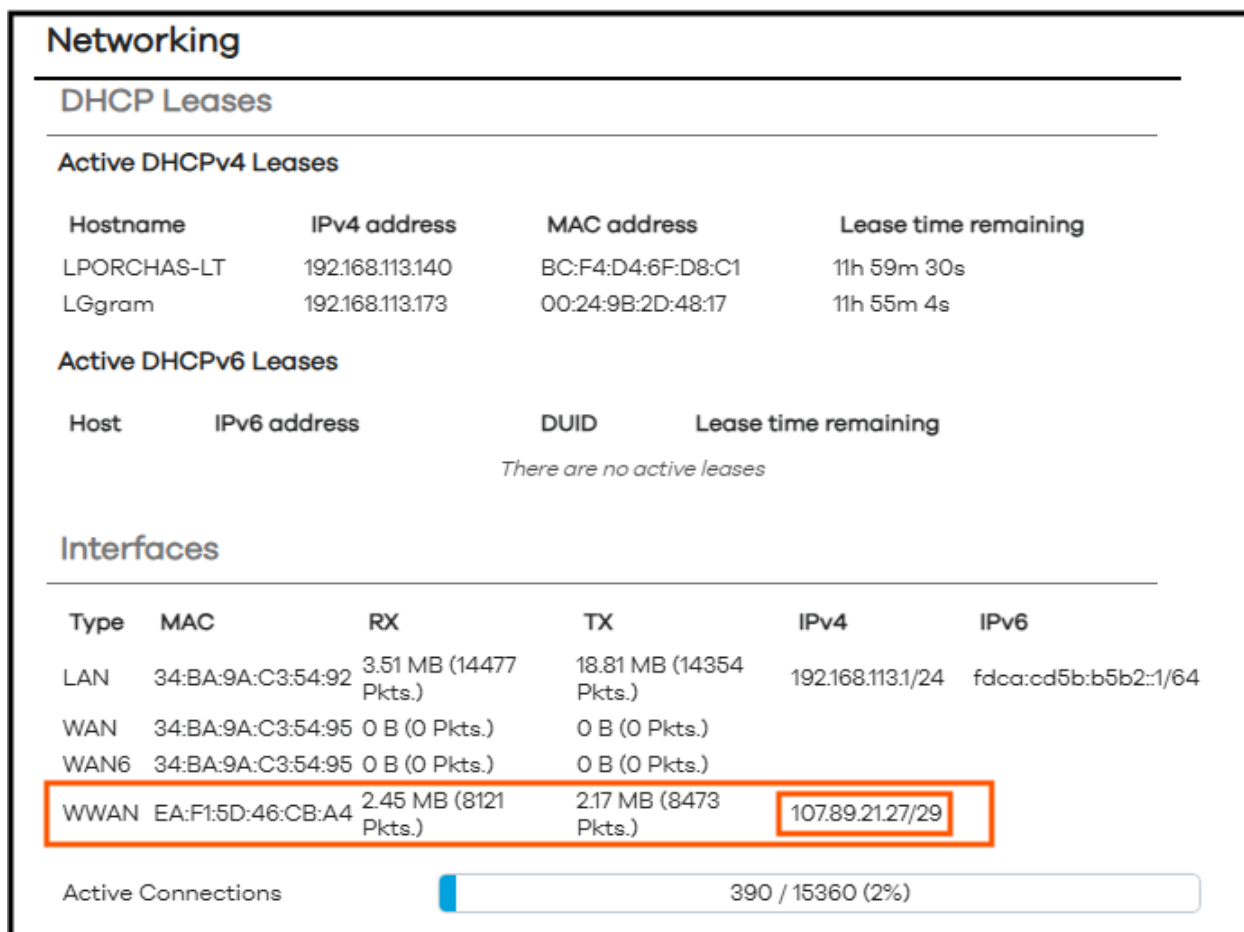


Figure 34: Networking – WWAN IPv4 Address

3.2 Changing LAN IP Address

By default, the **LAN IP** address of the device is set to **192.168.113.1**. If the user needs to configure this setting to fit their network environment, do the following to make the change in Mission Control:

➤ **Note:** In this environment, the system automatically sets a /24 or Class C network and will provide IP addresses to devices within this range.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. In the **LAN IP** field, click on the drop-down arrow and click inside the custom field.

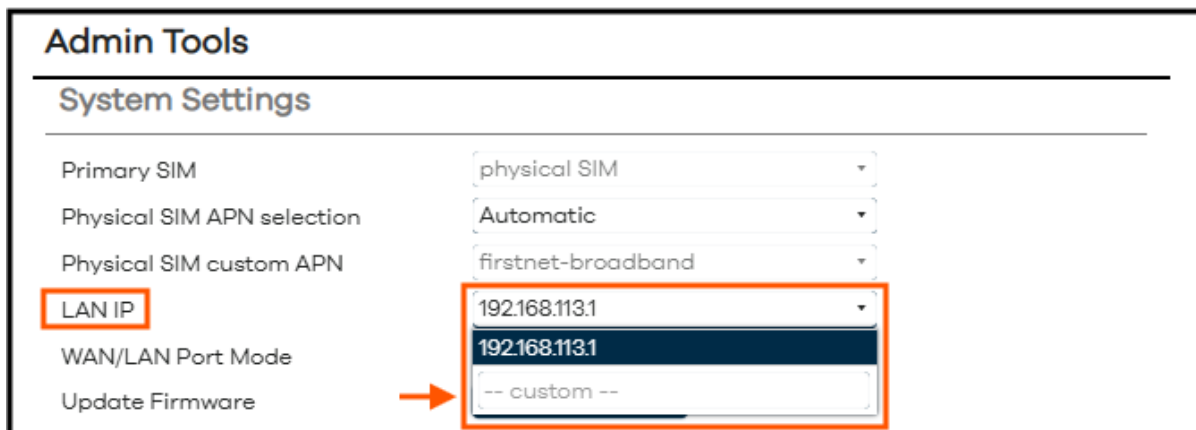


Figure 35: System Settings – Changing LAN IP Address

3. Enter the new IP address in the custom field and hit **Enter**. Otherwise, it will revert to its default setting, or pre-configured IP address.
4. After clicking on **Enter** above, a popup window will warn the user that the system will be temporarily unreachable and that a manual reconfiguration of the URL address in the web browser address bar will be required to regain access to the device as soon as the change is committed.

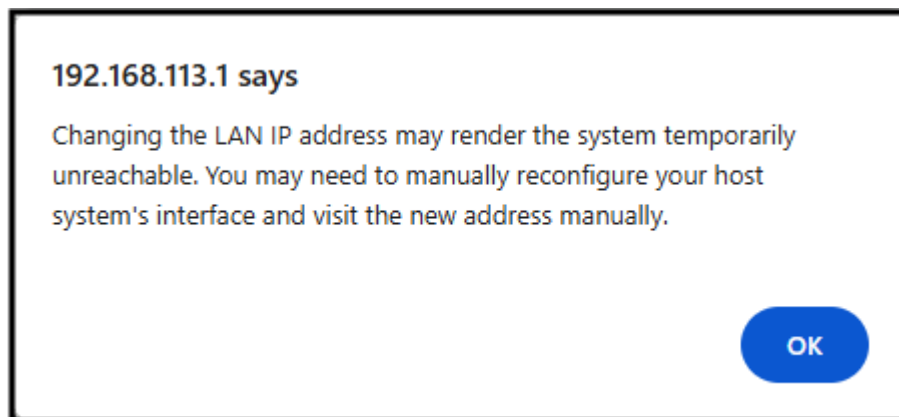


Figure 36: LAN IP address warning

5. Click on the **Save & Apply** button at the bottom to confirm the change.
6. A **Connectivity change** popup message will appear, warning the user that current access to the device will be interrupted if the user proceeds. The user is given options to either **Cancel**, **Apply with revert after connectivity loss**, or **Apply and keep settings**.

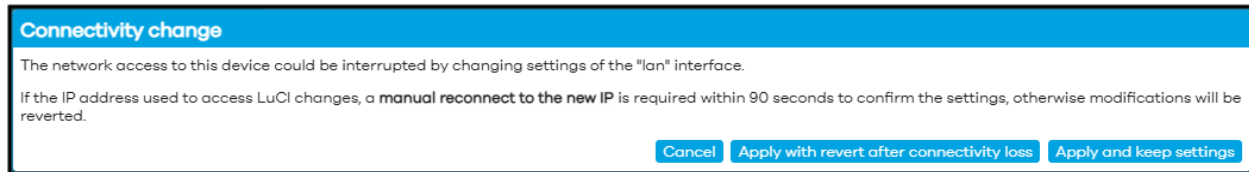


Figure 37: Connectivity change popup message

- 6a. **Cancel** – will not proceed with committing the change but will keep unapplied changes pending and take the user back to step 5.
- 6b. **Apply with revert after connectivity loss** – will begin to commit the change but the user will have 90 seconds to regain access to the device using the new IP address. Otherwise, the setting will automatically revert to the previous setting. Another popup window (**Configuration changes have been rolled back!**) will ask the user to select **Dismiss**, **Revert changes**, or **Apply unchecked**.
 - **Dismiss** – will dismiss this popup window and take the user back to step 5.
 - **Revert changes** – will revert changes and take the user back to step 2.
 - **Apply unchecked** – will commit the change. Skip to step 7.

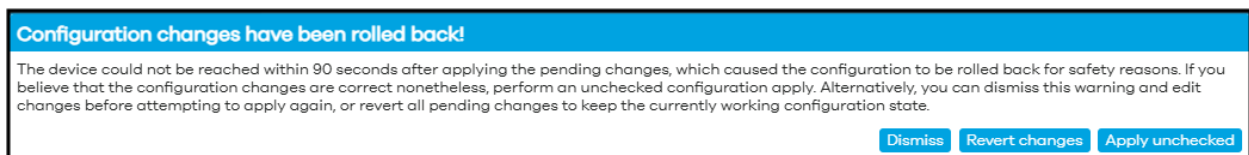


Figure 38: Configuration changes have rolled back! popup message

- 6c. **Apply and keep settings** – will commit the change.
7. Give the device a few minutes to successfully regain network connectivity before attempting to reconnect to MegaFi 2 via Mission Control.
- **Note:** After proceeding with the LAN IP change, the user will need to retype the new IP address in the web browser address bar to regain access to the device.

3.3 Flash/Update Firmware

The user can either use Mission Control or MegaPortal (Nextivity's Cloud portal for MegaFi 2), to update MegaFi 2's firmware.

Notes:

- Firmware updates for MegaFi 2 are primarily only supported via MegaPortal. By default, the device is set to automatically update its firmware whenever there is a new version available in the cloud. This feature does not necessarily auto-update the device, but it acknowledges a new update is available and requires some user intervention to carry out the update. To update the device using MegaPortal, please refer to the *MegaPortal User Manual*.
- For special needs or requirements, and only with the assistance of Nextivity Support, a user may update the firmware via Mission Control. To manually update the firmware for MegaFi 2 via Mission Control, the firmware version-specific **BIN** file needs to be obtained from Nextivity Support.

If the user cannot update from the Portal or requires an immediate update, do the following to update the device in Mission Control.

- ✓ **Assumption:** The user has obtained the appropriate firmware (**BIN** file) from Nextivity Support, it is loaded on a computer workstation or laptop, and it is directly connected to a LAN port on MegaFi 2 or via its Wi-Fi connection.
 - **Note:** Uploading an incorrect file can render your device inoperable and may void warranty.
1. Navigate to **Overview > System Settings** under **Admin Tools**.
 2. Click on the **Upload Firmware** or **Flash image...** button next to **Update Firmware**.

Admin Tools

System Settings

Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Upload Firmware
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

Save & Apply Save Reset

Figure 39: Firmware update – Upload Firmware button

- On the pop-up **Uploading file...** window, click on **Browse** to locate the firmware file.

Uploading file...

Please select the file to upload.

Browse... Cancel Upload

Figure 40: Uploading file... - Browse button

- The firmware file should be a **BIN** type file, and, depending on the firmware version, around 47 MB or more.

Name	Status	Date modified	Type	Size
Speedway_Sysupgrade_v3.4.1.bin		10/6/2025 2:29 PM	BIN File	48,642 KB

Figure 41: Firmware update – Select the upgrade file

- Select the firmware file. The **Uploading file...** window now shows the selected file.



Figure 42: Firmware update – Uploading the selected upgrade file

6. Click on **Upload**, and the file will begin to upload.

 


Figure 43: Firmware update – Status of upgrade file upload

7. A new pop-up window **Flash image?** will ask the user to manually verify the checksum **SHA256** value displayed here, with the checksum **SHA256** value displayed inside the checksum file. Only continue if the values match.
- **Note:** The **SHA256** value is unique to each version. In this example, this is the **SHA256** value for firmware version 3.4.1.

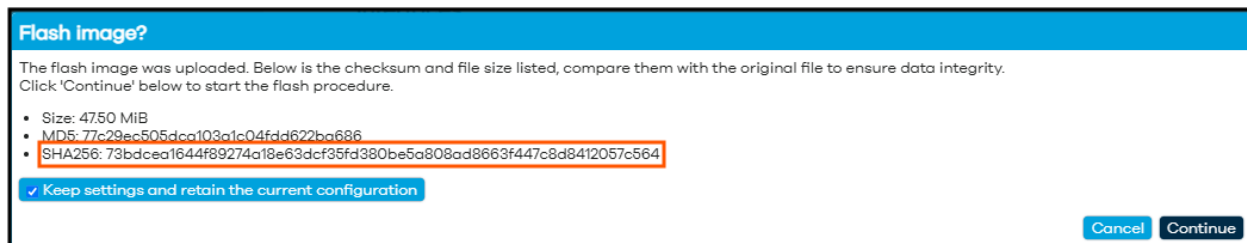


Figure 44: Flash image window – Compare checksum and file size with original

- **Note:** By default, the **Keep settings and retain the current configuration** box is checked. If you uncheck this box, the current configuration will be erased after the update.
- ! **WARNING:** If you accidentally try to upload the wrong file format to the MegaFi 2 device, a warning screen will be displayed (see example below) with the error message in orange: **“The uploaded image file does not contain a supported format. Make sure that you choose the generic image format for your platform”**. If this happens, **STOP - DO NOT PROCEED**. Select **Cancel** to back out of this operation and avoid "bricking" your device.

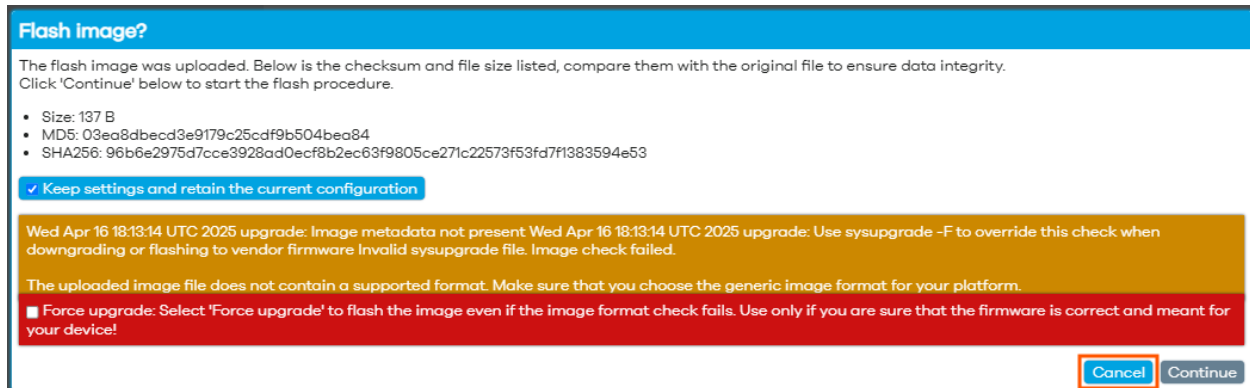


Figure 45: Flash image window – Image format check failure

- **Note:** Updating from version 3.3.0 to version 3.4.1, there is a slightly different warning. In this case the size of the file is in question and the error message in yellow reads: **“It appears that you are trying to flash an image that does not fit into the flash memory, please verify the image file!”**. This is a known issue, and if the checksum value matches proceed by checking the box: **“Force upgrade: Select ‘Force upgrade’ to flash the image even if the image format check fails. Use only if you are sure that the firmware is correct and meant for your device!”**. Then proceed to the next step.

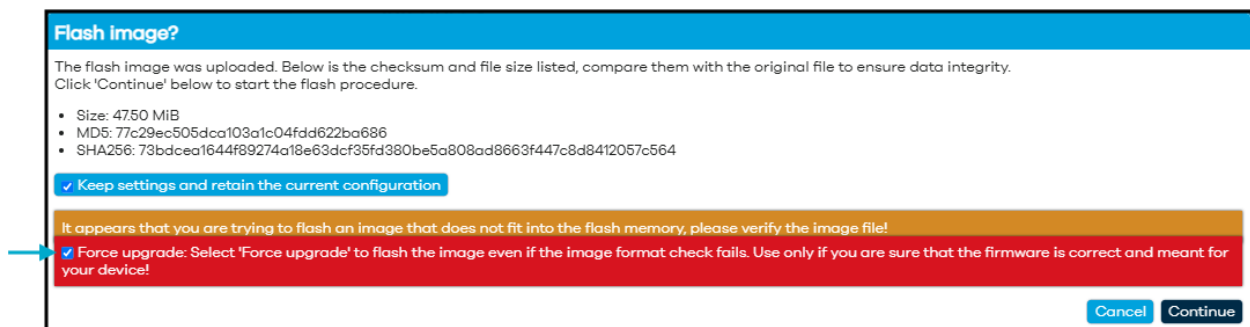


Figure 46: Flash image window – Image size

8. Click on **Continue** on **Flash image?** only after the SHA256 values have been verified to match.
 9. The **Flashing...** window will display.

! **WARNING:** “Do not power off the unit until the image flashing is complete.”
- **Note:** The update will take 3-5 minutes.

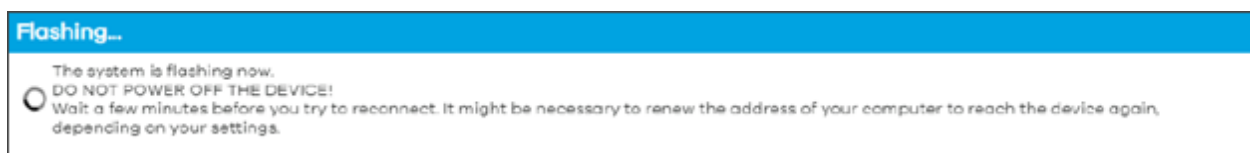


Figure 47: Flashing window – message indicating progress of the system flashing process

10. When the image flash is complete, you will be taken back to the login page.

11. Log in to continue.

Notes:

- Current status may initially display **No Internet** and no signal strength bars. It will correct itself once the device properly boots up from the upgrade process.
- Refresh the browser if the device has not gone back to the home screen after 10 minutes and re-login again.

12. Verify that the intended firmware upgrade successfully loaded by looking at the bottom right of any Mission Control page. Once verified, the firmware update is complete.



Figure 48: Mission Control page showing Firmware Version

3.4 Backup Existing Configuration

If the user wants to backup an existing configuration, do the following in Mission Control:

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Save to File** button next to **Backup Existing Configuration**.

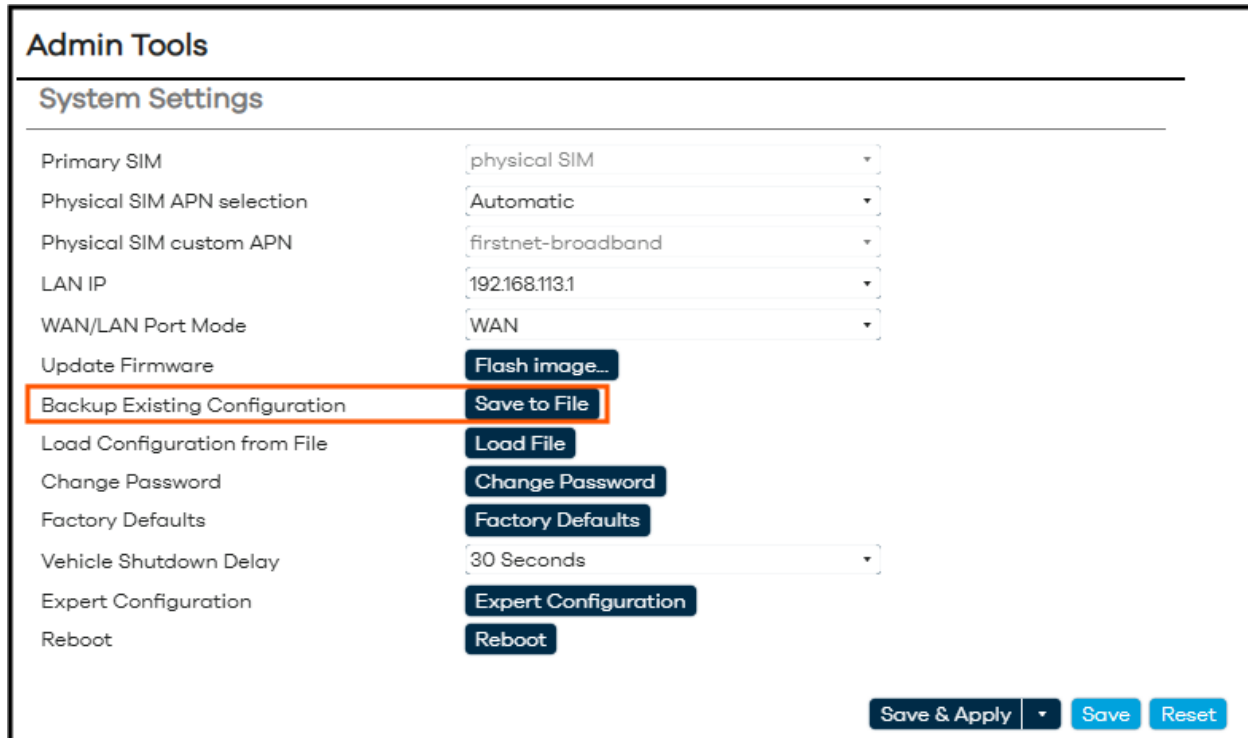


Figure 49: System Settings – Save to File button

3. A tar.gz (tarball) file is created and stored in Downloads. Take note of the date of the file for future reference if needed.

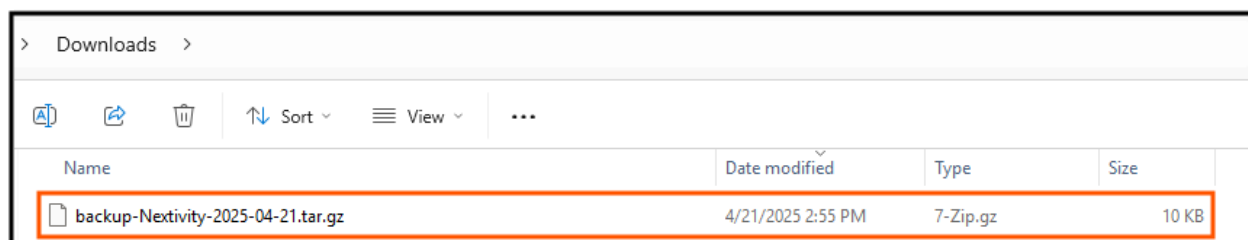


Figure 50: Downloads folder showing downloaded tar.gz file

➡ **Note:** The backup configuration file will **not** include the configured device password.

3.5 Load Configuration from File

If the user wants to load a backup/saved configuration (i.e., duplicate a configuration file onto other MegaFi 2 devices or restore a previous configuration file), do the following in Mission Control:

- **Note:** The backup configuration file will **not** bring over the previous device password. All other Wi-Fi settings, and configuration settings from that MegaFi 2 device will be included.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Load File** button, sometimes referred to as **Upload archive...** next to **Load Configuration from File**.

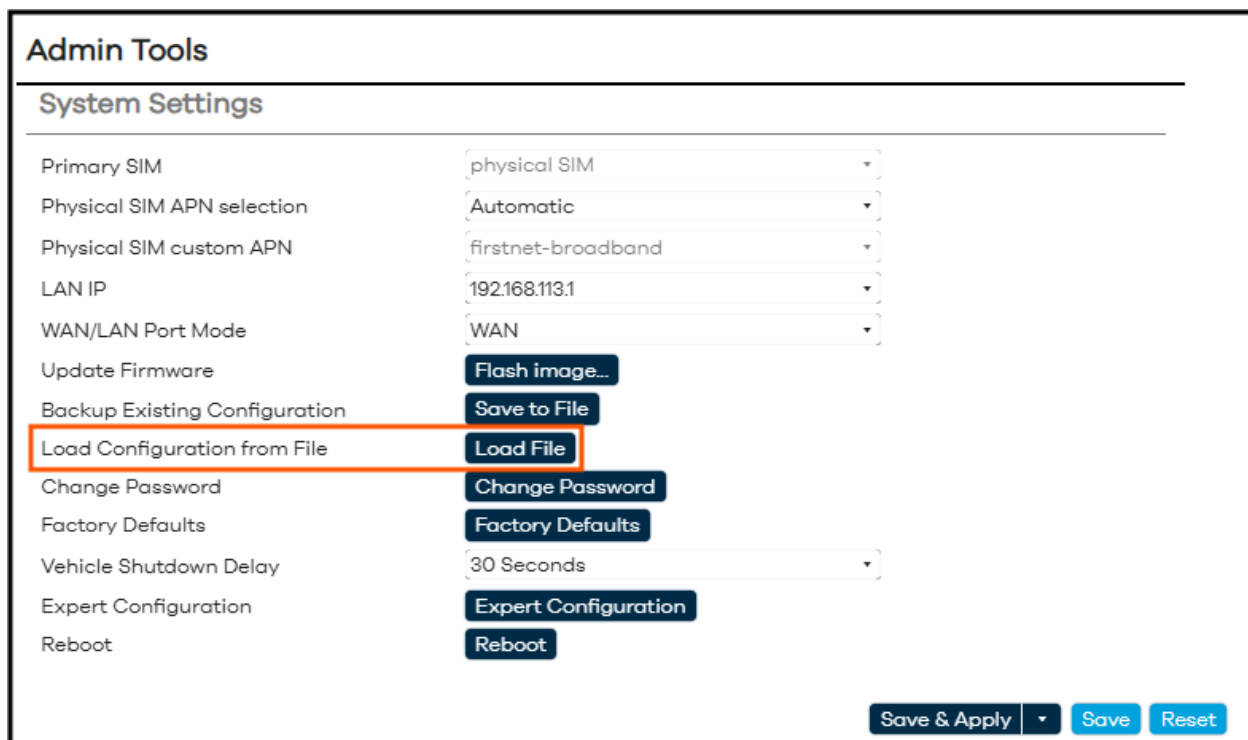


Figure 51: System Settings – Load File button

3. The **Uploading file...** window pop ups, select **Browse** to locate the appropriate tarball file and **Open**.



Figure 52: Uploading file – Browse to locate file button

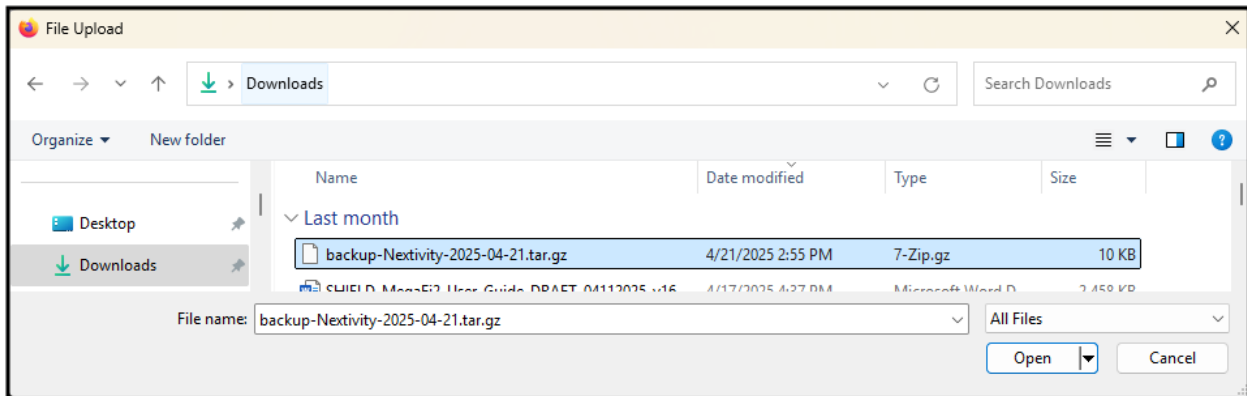


Figure 53: Uploading file and Browse to and select the tarball file

4. The **Uploading file...** pop-up window shows the file chosen to load. Verify it is the intended file before selecting **Upload** to continue with loading the file.



Figure 54: Load Configuration from File – Uploading selected file

5. In the **Apply backup?** pop up window, press **Continue** at the bottom to proceed with restoring the backup file and reboot. Otherwise, **Cancel** to abort the operation.

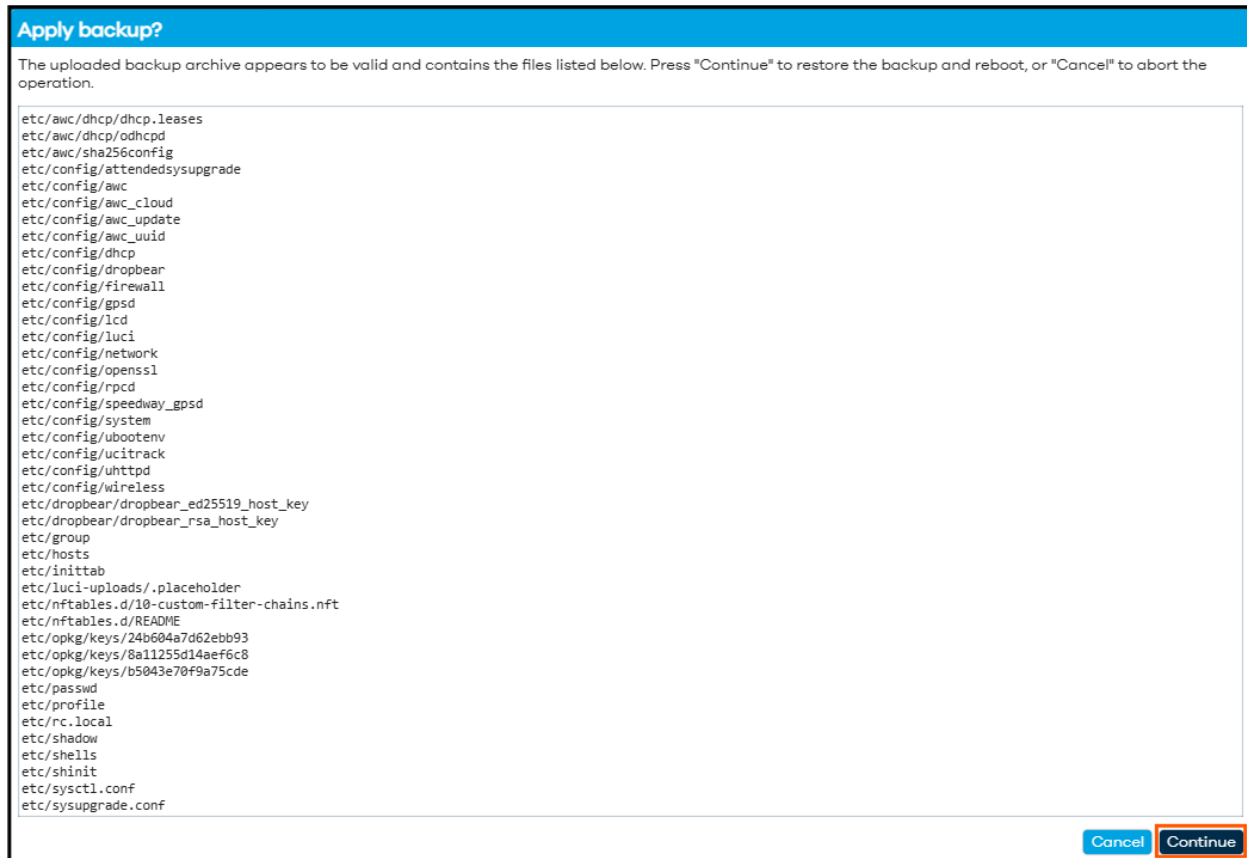


Figure 55: Apply backup – Confirmation to continue

6. Give the backup operation 3-5 minutes to finish as it reboots.

! WARNING: Do not power off the device during this time.

3.6 Change Password

If the user requires to change the current password, do the following in Mission Control.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Change Password** button next to **Change Password**.

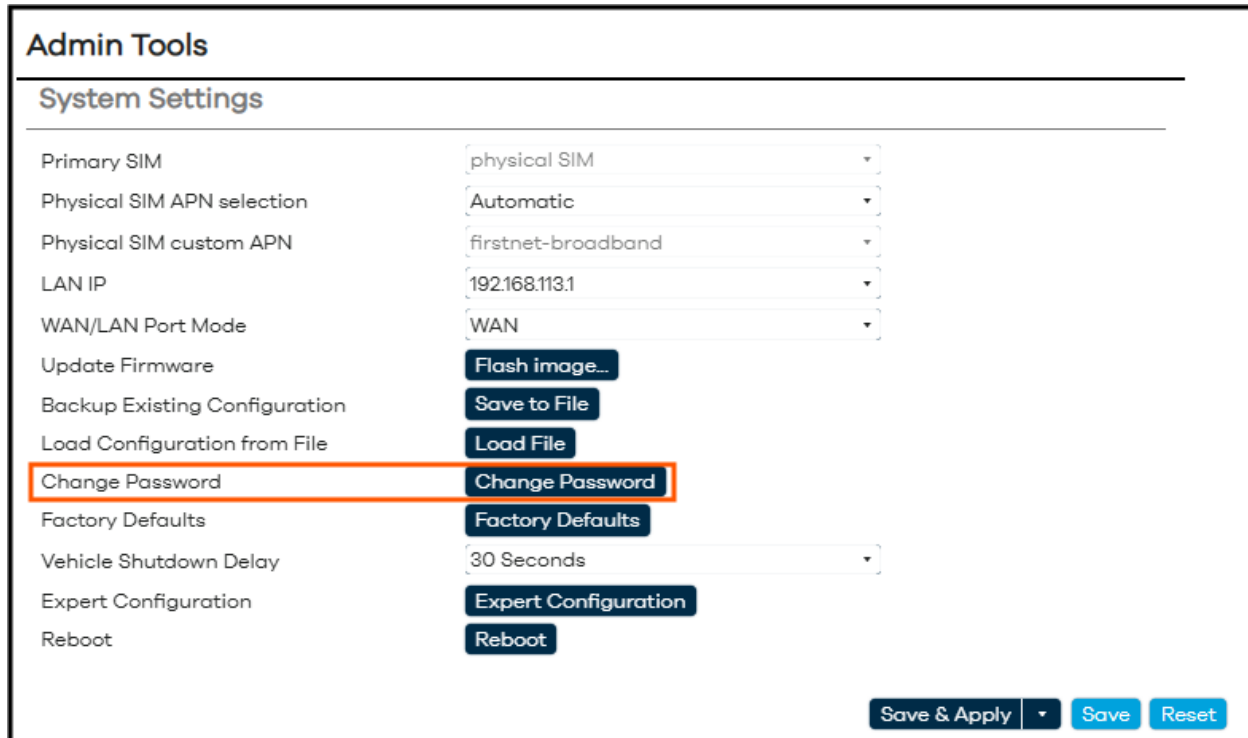


Figure 56: System Settings – Change Password button

3. The user is automatically put into Expert Configuration Mode and taken to the **System > Router Password** page.


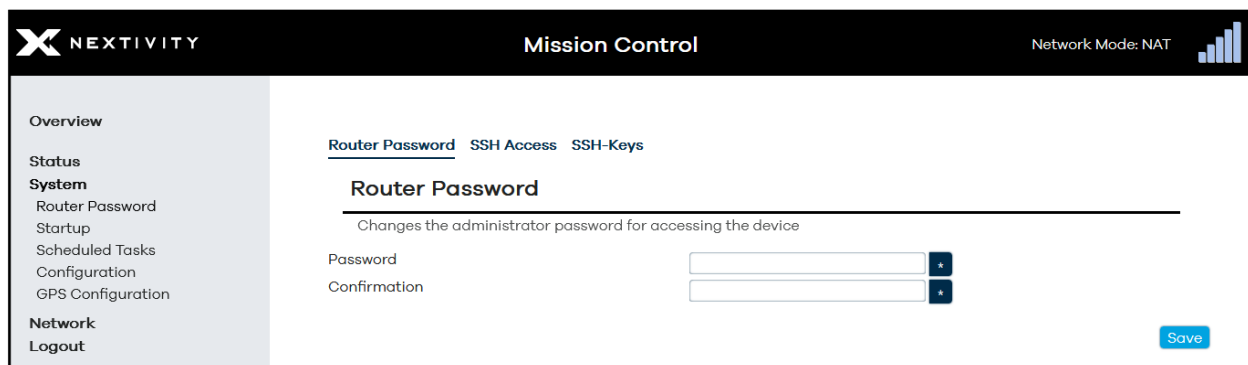


Figure 57: Router Password page – Expert Configuration Mode

4. Enter a new password in the **Password** field and re-type it in the **Confirmation** field as well.
- **Note:** The device will not accept weak passwords. Password must meet the following requirements: a minimum length of 10 characters and a randomized complexity of lowercase letters, uppercase letters, and numbers.

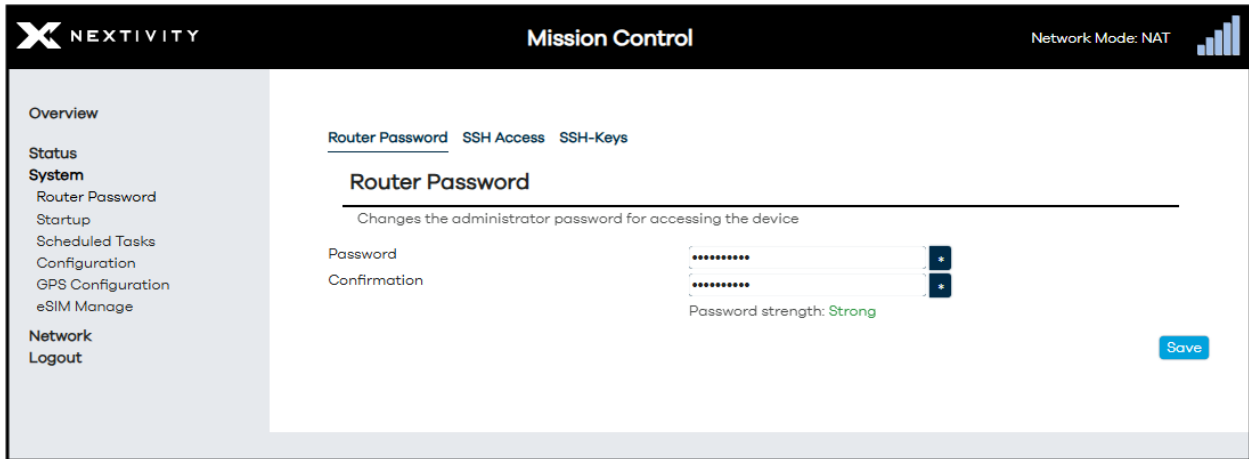

The screenshot shows the 'Mission Control' interface for a Nextivity device. The left sidebar contains a navigation menu with 'Overview' selected. The main content area is titled 'Router Password' and includes a sub-header 'Changes the administrator password for accessing the device'. There are two input fields: 'Password' and 'Confirmation', both masked with dots. Below the fields, the password strength is indicated as 'Strong'. A 'Save' button is located at the bottom right of the form.

Figure 58: Router Password page – Enter new password

5. Click on the **Save** button.
6. Once the change is confirmed by the device, the user will be put back in the Overview page.

3.7 Factory Defaults via Mission Control

If the user wants to return to factory default settings, the user can perform a factory reset to the MegaFi 2 device in Mission Control as follows:

- **Note:** Before proceeding with a factory reset, it is recommended to save a backup configuration of the device in case you need to revert to its previous settings. Follow the steps hi-lighted above in section 3.4 Backup Existing Configuration.
- **Note:** After a factory reset, MegaFi 2's UUID may need to be reassigned for Cloud support. If cloud access breaks after a factory reset, contact the support team at support@nextivityinc.com for further assistance.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Factory Defaults** button next to **Factory Defaults**.

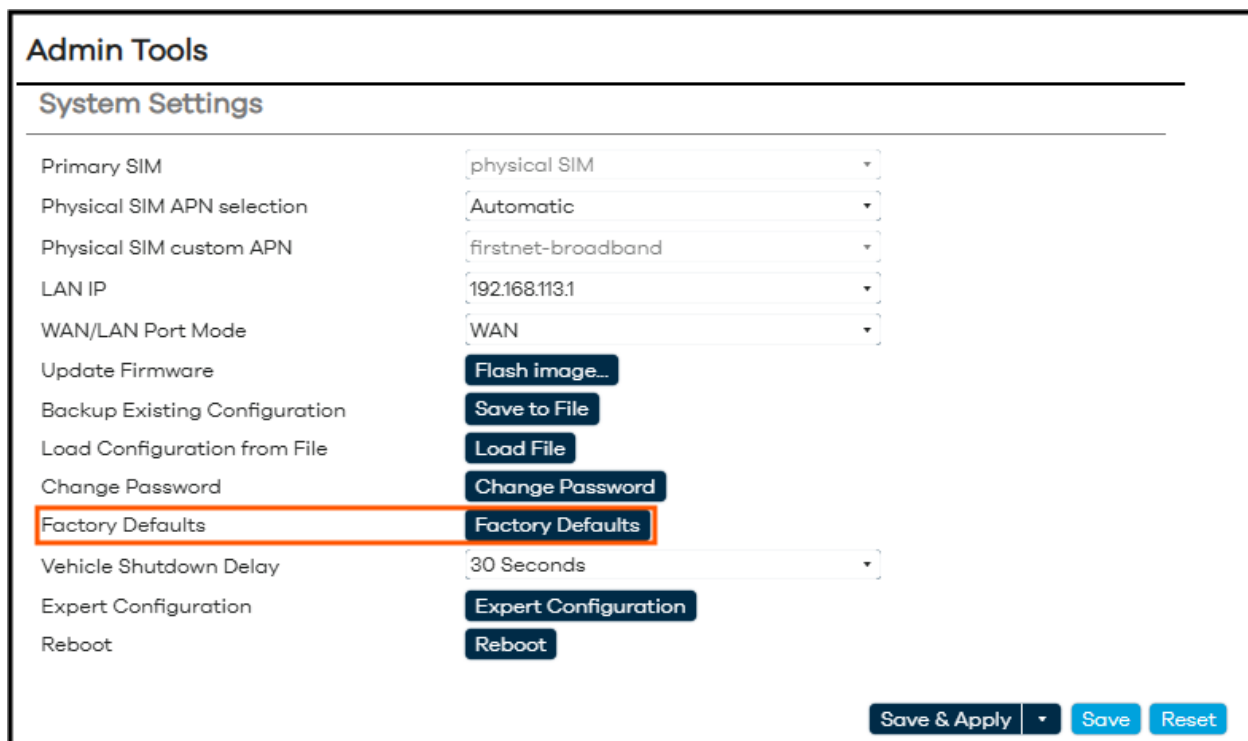


Figure 59: System Settings – Factory Defaults button

3. A window will pop up and ask the user to confirm the operation. Click **OK** to continue.

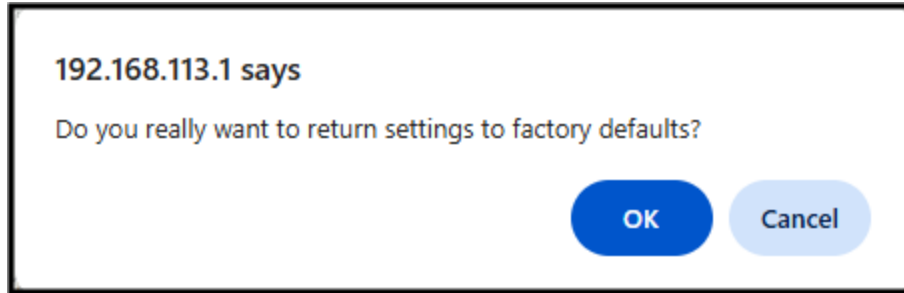


Figure 60: Confirmation to return settings back to factory defaults

4. Give the device 3-5 minutes to complete the operation.
 5. Once the device recovers, the user will be asked to log in to Mission Control again.
 6. The user will then be asked to accept the EULA agreement and change the default password.
- ❗ To factory default the MegaFi 2 using the **DISPLAY** button (in case of a forgotten password), press and hold the **DISPLAY** button for 20 seconds and release. The device will take a few minutes to recover, and all settings will now be set to factory default.

3.8 Vehicle Shutdown Delay

If the MegaFi 2 device is installed in a vehicle, the user can increase the **Vehicle Shutdown Delay** setting up to 2 hours. The default setting is 30 seconds. This ensures that the MegaFi 2 device will stay powered on after the vehicle is shut off and it will continue to provide services until the timer expires. To change this setting, do the following in Mission Control:

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click the drop-down arrow to expose the other pre-defined settings and select from **15 minutes**, **1 Hour**, or **2 Hours**.



The screenshot shows the 'Admin Tools' section with a 'System Settings' sub-section. A list of settings is on the left, and their corresponding controls are on the right. The 'Vehicle Shutdown Delay' setting is highlighted with an orange box. Its dropdown menu is open, showing options: '30 Seconds' (selected), '30 Seconds', '15 Minutes', '1 Hour', and '2 Hours'. At the bottom right, there are buttons for 'Save & Apply', 'Save', and 'Reset'.

Setting	Value/Action
Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Upload Firmware
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds (selected), 30 Seconds, 15 Minutes, 1 Hour, 2 Hours
Expert Configuration	
Reboot	

Figure 61: System Settings – Vehicle Shutdown Delay options

3. Click on **Save & Apply** to confirm the new setting.

3.9 Reboot

If the user would like to reboot the MegaFi 2, do the following in Mission Control.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Reboot** button.

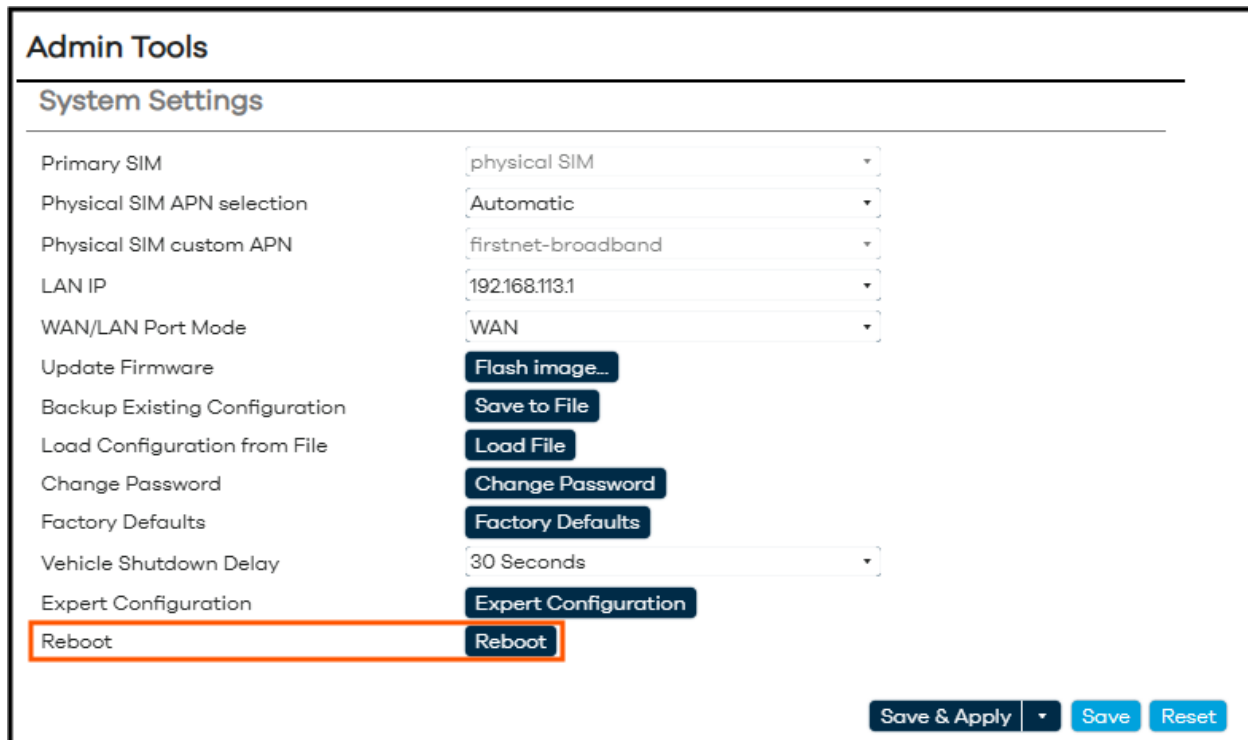


Figure 62: System Settings – Reboot button

3. A pop-up window asks the user to confirm the operation. Click on **OK** to continue.

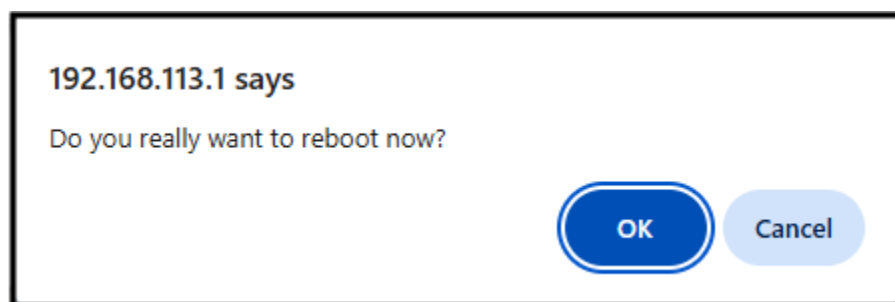


Figure 63: Confirmation message to reboot device

4. Wait for the device to reboot before continuing. The process will take 1 - 3 minutes.



Figure 64: Message indicating device is being rebooted

5. The user will be asked to log in again into Mission Control after the device reboots. Click on the **To login...** button to do so.



Figure 65: Prompt to log in after device reboots

3.10 Wireless Settings

Beginning with firmware version 3.4.1, two Guest Wi-Fi's or SSIDs have been introduced into Mission Control. There is one for 2.4 GHz and another for 5 GHz, for a total of 4 SSIDs that include the two primary SSIDs. Both Guest SSIDs are disabled by default while the two primary SSIDs are enabled by default.

The screenshot displays the 'Mission Control' interface for Nextivity. On the left is a navigation menu with options: Overview, Status, System, Network, Interfaces, Wireless, Routing, DHCP and DNS, SNMP, Diagnostics, Firewall, and Logout. The main content area is titled 'WiFi 2.4GHz Settings' and 'WiFi 5GHz Settings'. Each section has a 'Device Settings' table. In the 2.4GHz section, the 'WiFi 2.4GHz Guest' row is highlighted with an orange box, showing 'Radio Enabled' as 'Disabled'. Similarly, in the 5GHz section, the 'WiFi 5GHz Guest' row is highlighted with an orange box, also showing 'Radio Enabled' as 'Disabled'. At the bottom right, there are buttons for 'Save & Apply', 'Save', and 'Reset'.

Figure 66: System Settings – Expert Configuration button

To verify overall Wi-Fi settings, refer to section 3.10.1 below. To modify the primary SSIDs, refer to section 3.10.2. To enable and modify the Guest SSIDs, refer to section 3.10.3.

3.10.1 Verify Wi-Fi Settings

To view current Wi-Fi settings, do the following:

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

Admin Tools

System Settings

Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

Save & Apply Save Reset

Figure 67: System Settings – Expert Configuration button

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.

192.168.113.1 says

The Expert configuration section contains items that may render the MegaFi inoperative and require a factory reset. Please confirm you want to proceed.

OK Cancel

Figure 68: Confirmation message to enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **Network > Wireless**.



Figure 69: Navigation pane showing options available in Expert mode – Wireless

- **Note:** To view the primary SSID hidden Keys/Passwords, click on the * (asterisk) button next to the **Key** field to make it visible for either SSID. By default, the key/password is the same for both 2.4 GHz and 5 GHz settings and printed on the label or on the LCD display screen.

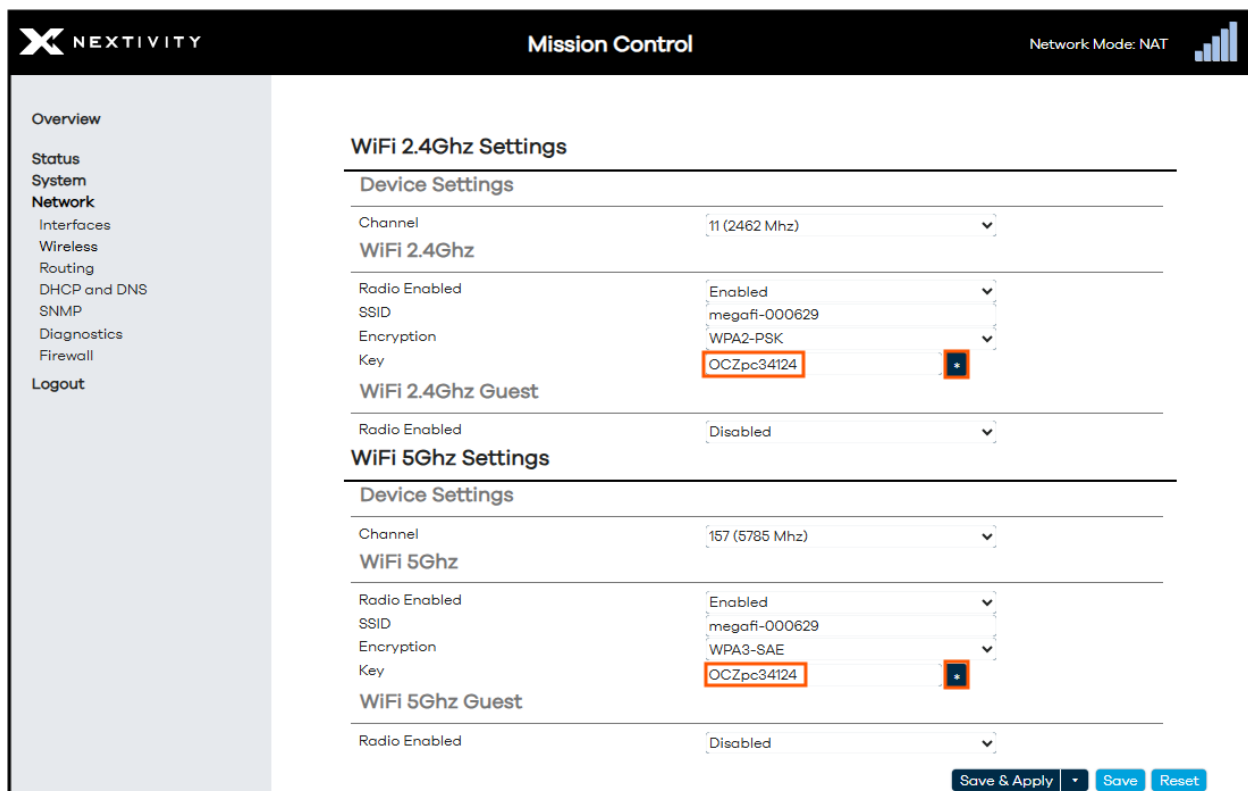


Figure 70: Wireless Settings – View hidden Keys

3.10.2 Change Wi-Fi Settings

The following options available for the primary WiFi 2.4GHz and 5 GHz Settings are:

Wi-Fi Setting	WiFi 2.4 GHz Settings (Default)	WiFi 2.4 GHz Settings -Other Options	WiFi 5 GHz Settings (Default)	WiFi 5 GHz Settings -Other Options
Radio Enabled	Enabled	Disabled	Enabled	Disabled
Channel	11 (2462 Mhz)	Auto and Channels 1-11	157 (5785 Mhz)	Auto and Channels 36, 40, 44, 48, 149, 153, 157, 161
SSID	default SSID name on label or LCD Display screen		default SSID name on label or LCD Display screen	
Encryption	WPA2-PSK	WPA2-EAP, WPA3-EAP, WPA2-EAP/WPA3-EAP, WPA2-PSK/WPA3-SAE, WPA3-SAE, and Disabled	WPA3-SAE	WPA2-EAP, WPA3-EAP, WPA2-EAP/WPA3-EAP, WPA2-PSK/WPA3-SAE, WPA3-SAE, and Disabled
Key	default key (password) on label or LCD Display screen		default key (password) on label or LCD Display screen	

Table 1: Wi-Fi Settings for 2.4 GHz and 5 GHz

To change current Wi-Fi settings, do the following:

- **Note:** If you attempt to make wireless changes while connected to the device via Wi-Fi, expect to be disconnected after committing the changes. You will then have to reconnect to Wi-Fi using the new settings.
- 1. For settings with a drop-down menu arrow, such as **Radio Enabled**, click the arrow and choose the preferred setting from the options.

Nextivity Mission Control Network Mode: NAT

Overview

- Status
- System
- Network**
 - Interfaces
 - Wireless
 - Routing
 - DHCP and DNS
 - SNMP
 - Diagnostics
 - Firewall
- Logout

WiFi 2.4GHz Settings

Device Settings

Channel: 11 (2462 Mhz)

WiFi 2.4GHz

Radio Enabled: **Enabled**

SSID: Enabled

Encryption: Disabled

Key: OCZpc34124

WiFi 2.4GHz Guest

Radio Enabled: Disabled

WiFi 5GHz Settings

Device Settings

Channel: 157 (5785 Mhz)

WiFi 5GHz

Radio Enabled: Enabled

SSID: megafi-000629

Encryption: WPA3-SAE

Key: OCZpc34124

WiFi 5GHz Guest

Radio Enabled: Disabled

Save & Apply Save Reset

Figure 71: Wireless Settings – Selecting Drop-down Menu options

- For **SSID** and **Key** modifications, remove/delete or change the previous setting and enter the new **SSID** and/or new and appropriate **Key** (Must be at least 10 characters long) into their respective fields.

Nextivity Mission Control Network Mode: NAT

WiFi 2.4GHz Settings

Device Settings

Channel: 11 (2462 Mhz)

WiFi 2.4GHz

Radio Enabled: Enabled

SSID: new-ssid

Encryption: WPA2-PSK

Key: newpassword

WiFi 2.4GHz Guest

Radio Enabled: Disabled

WiFi 5GHz Settings

Device Settings

Channel: 157 (5785 Mhz)

WiFi 5GHz

Radio Enabled: Enabled

SSID: megafi-000629

Encryption: WPA3-SAE

Key: *****

WiFi 5GHz Guest

Radio Enabled: Disabled

Buttons: Save & Apply, Save, Reset

Figure 72: Wireless Settings – Modifying SSID and Key fields

3. Click on **Save** followed by **Save & Apply** to confirm the change(s).

➤ **Note:** If the user selects either **WPA2-EAP** or **WPA3-EAP** encryption for **Wi-Fi 2.4** or **5 GHz** settings, the **Key** option goes away, and the user is presented with the following new options. Configure these settings as required for your Extensible Authentication Protocol (EAP) network environment.

- **RADIUS Server IP**
- **RADIUS Server Port**
 - Default setting - 1812
- **RADIUS Secret** - To view the hidden RADIUS Secret, click on the * (asterisk) button next to the field to make it visible for either SSID.

Nextivity Mission Control Network Mode: NAT

WiFi 2.4GHz Settings

Device Settings

Channel: 11 (2462 Mhz)

WiFi 2.4GHz

Radio Enabled: Enabled

SSID: megafi-000629-24G

Encryption: WPA2-EAP

RADIUS Server IP:

RADIUS Server Port: 1812

RADIUS Secret:

WiFi 2.4GHz Guest

Radio Enabled: Disabled

WiFi 5GHz Settings

Device Settings

Channel: 157 (5785 Mhz)

WiFi 5GHz

Radio Enabled: Enabled

SSID: megafi-000629-5G

Encryption: WPA3-EAP

RADIUS Server IP:

RADIUS Server Port: 1812

RADIUS Secret:

WiFi 5GHz Guest

Radio Enabled: Disabled

Save & Apply Save Reset

Figure 73: Wireless Settings – EAP fields

- **Note:** Devices that connect to either primary SSID will be assigned to IP addresses within the default LAN subnet of 192.168.113.x/24 or whatever was subsequently configured as described in section 3.2 above.

3.10.3 Guest Wi-Fi Settings

The Guest Wi-Fi/SSIDs are disabled by default. The following options available for Guest Wi-Fi 2.4 GHz and 5 GHz settings are:

Guest Wi-Fi Setting	Guest WiFi 2.4 GHz Settings (Default)	Guest WiFi 2.4 GHz Settings -Other Options	Guest WiFi 5 GHz Settings (Default)	Guest WiFi 5 GHz Settings -Other Options
Radio Enabled	Disabled	Enabled	Disabled	Enabled
SSID	default SSID name is "guest"		default SSID name is "guest5G"	
Encryption	Disabled	WPA2-PSK, WPA2-EAP, WPA3-EAP, WPA2-EAP/WPA3-EAP, WPA2-PSK/WPA3-SAE, WPA3-SAE	Disabled	WPA2-PSK, WPA2-EAP, WPA3-EAP, WPA2-EAP/WPA3-EAP, WPA2-PSK/WPA3-SAE, WPA2-SAE
Key	none		none	

Table 2: Guest Wi-Fi Settings for 2.4 GHz and 5 GHz

To change current Guest Wi-Fi settings, do the following:

- **Note:** If you attempt to make Guest Wi-Fi changes while connected to the device via Guest Wi-Fi, expect to be disconnected after committing the changes. You will then have to reconnect to Wi-Fi using the new settings. Any device connected to a Guest Wi-Fi will not have access to MegaFi's Mission Control.
1. Enable the Guest Wi-Fi radio by selecting the Enabled option from the drop-down menu.

The screenshot shows the 'Mission Control' interface for Nextivity. On the left is a navigation menu with options: Overview, Status, System, Network (selected), Interfaces, Wireless, Routing, DHCP and DNS, SNMP, Diagnostics, Firewall, and Logout. The main content area is titled 'WiFi 2.4GHz Settings' and 'WiFi 5GHz Settings'. Under 'WiFi 2.4GHz Settings', there are sections for 'Device Settings' and 'WiFi 2.4GHz Guest'. The 'Radio Enabled' dropdown for the 'WiFi 2.4GHz Guest' section is highlighted with an orange box, showing a list of options: 'Enabled', 'Enabled', and 'Disabled'. The 'WiFi 5GHz Settings' section also has similar fields for 'Device Settings' and 'WiFi 5GHz Guest'. At the bottom right, there are buttons for 'Save & Apply', 'Save', and 'Reset'.

Figure 74: Guest Wireless Settings – Selecting Drop-down Menu options

2. Change the Guest SSID as needed by typing it into the SSID field.
3. Change the Encryption as needed from the default setting of Disabled to any of the available options in the drop-down menu.
4. Enter an appropriate **Key** (Must be at least 10 characters long) into its field. Click on the * (asterisk) button next to the **Key** field to make it visible for either SSID.
5. Click on **Save** followed by **Save & Apply** to confirm the change(s).

➡ **Note:** If the user selects either **WPA2-EAP** or **WPA3-EAP** encryption for **Wi-Fi 2.4** or **5 GHz** settings, the **Key** option goes away, and the user is presented with the following new options. Configure these settings as required for your Extensible Authentication Protocol (EAP) network environment.

- **RADIUS Server IP**
- **RADIUS Server Port**

- Default setting - 1812
- **RADIUS Secret** - To view the hidden RADIUS Secret, click on the * (asterisk) button next to the field to make it visible for either SSID.

The screenshot displays the 'Mission Control' interface for Nextivity. The left sidebar contains navigation links: Overview, Status, System, Network, Interfaces, Wireless, Routing, DHCP and DNS, SNMP, Diagnostics, Firewall, and Logout. The main content area is titled 'WiFi 2.4GHz Settings' and 'WiFi 5GHz Settings'. Each section has a 'Device Settings' header and a 'Guest' sub-section. In the 'Guest' sub-sections, the 'RADIUS Secret' field is highlighted with an orange box, and the 'RADIUS Server Port' is set to 1812. The 'RADIUS Secret' field has a small blue square with a white asterisk next to it, indicating it can be toggled to show the secret. At the bottom right, there are buttons for 'Save & Apply', 'Save', and 'Reset'.

WiFi 2.4GHz Settings

Device Settings

Channel: 11 (2462 Mhz)

WiFi 2.4GHz

Radio Enabled: Enabled

SSID: megafi-000629-24G

Encryption: WPA2-PSK

Key: [Hidden]

WiFi 2.4GHz Guest

Radio Enabled: Enabled

SSID: newSSID

Encryption: WPA2-EAP

RADIUS Server IP: [Empty]

RADIUS Server Port: 1812

RADIUS Secret: [Hidden]

WiFi 5GHz Settings

Device Settings

Channel: 157 (5785 Mhz)

WiFi 5GHz

Radio Enabled: Enabled

SSID: megafi-000629-5G

Encryption: WPA3-SAE

Key: [Hidden]

WiFi 5GHz Guest

Radio Enabled: Enabled

SSID: guest5G

Encryption: WPA2-EAP/WPA3-EAP

RADIUS Server IP: [Empty]

RADIUS Server Port: 1812

RADIUS Secret: [Hidden]

Save & Apply Save Reset

Figure 75: Guest Wireless Settings – EAP fields

- **Note:** Devices that connect to either Guest SSID will be assigned to IP addresses within the subnet of 192.168.131.x/24 and are isolated from the main LAN subnet and from each other.

3.11 NAT vs. Passthrough Mode

The MegaFi 2 device can be set to either **NAT** (default setting) or **Passthrough Mode**. In **NAT Mode**, the device acts as an intermediary between a local network and the internet, translating private IP addresses into a single public IP address. This helps enhance security by hiding internal devices from external networks and allows multiple devices to share a single public IP. **Passthrough Mode** disables **NAT**, meaning the device does not modify IP addresses. It simply forwards traffic as-is, allowing a connected device (such as a firewall or router) to handle public IP assignments. **Passthrough** is often used when another device downstream is managing the network. Also, in **Passthrough Mode**, the carrier assigned IP address will be shared with the device directly connected behind the MegaFi 2 on the LAN 1 port. In some cases, computers with specific software will require this IP and can be the recipient of the passed through IP address. In addition, setting the device to **Passthrough Mode** will disable the WAN/LAN2 port as well as Wi-Fi.

Prior to implementing **Passthrough Mode**, the user needs to take the following steps:

- **Connection to MegaFi 2 Device** – the user will need to connect a computer workstation or laptop with an Ethernet cable to LAN port 1. The user will also need to make sure the computer is NOT connected to Wi-Fi.
- 🕒 **Note:** Only LAN port 1 is usable and all other LAN ports are disabled in **Passthrough Mode**.
- **Implement Custom APN/Static IP first** – Though not always the case, if the user is using a custom **APN**, the user will need to input the custom **APN** (Section 3.1) first prior to implementing **Passthrough Mode**. If the correct IP address does not appear on the device, please review SIM provisioning with the carrier. If the correct IP address does appear, then the user may proceed with implementing **Passthrough Mode** as instructed below.
- **Manually refresh the connected computer IP address** – Once in **Passthrough Mode**, the Mission Control software management interface will briefly be unreachable at <https://192.168.113.1> or whatever **LAN IP** address it has been configured to until the IP address is manually refreshed. If this occurs, go to Step 11 below for options to try to regain connection to Mission Control.

To change between **NAT** and **Passthrough** modes, do the following in Mission Control:

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

Admin Tools

System Settings

Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

Save & Apply Save Reset

Figure 76: System Settings – Entering Expert Configuration mode

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.

192.168.113.1 says

The Expert configuration section contains items that may render the MegaFi inoperative and require a factory reset. Please confirm you want to proceed.

OK Cancel

Figure 77: Confirmation message to enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **System > Configuration**.



Figure 78: Navigation pane showing options available in Expert mode – Configuration

- Under the **Networking** area, click on the drop-down arrow and select the desired mode: **NAT Mode** (default), or **Passthrough Mode** from the **Passthrough vs NAT (changing causes reboot)** option.

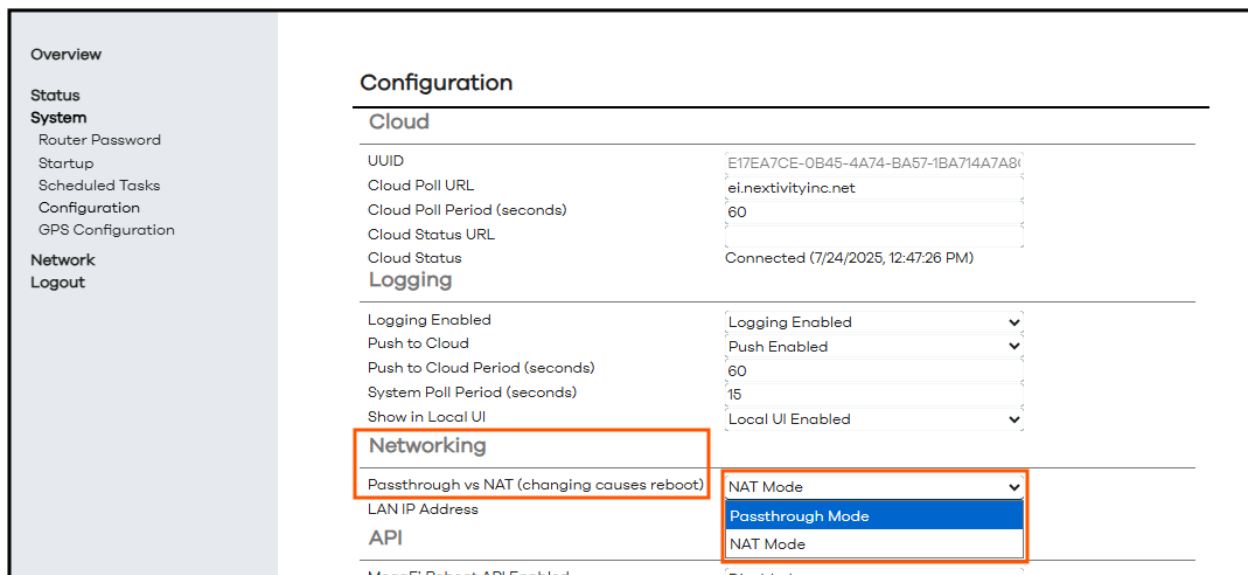


Figure 79: MegaFi 2 Configuration – Change modes (NAT or Passthrough)

- A pop-up window will warn the user that temporary access to Mission Control will be lost after committing to the mode change. After committing to the mode change, the user will have the option to restore the default configuration by holding the **Reset** button for 30 seconds if they don't wish to continue with the mode change. Click **OK** to continue with the mode change.

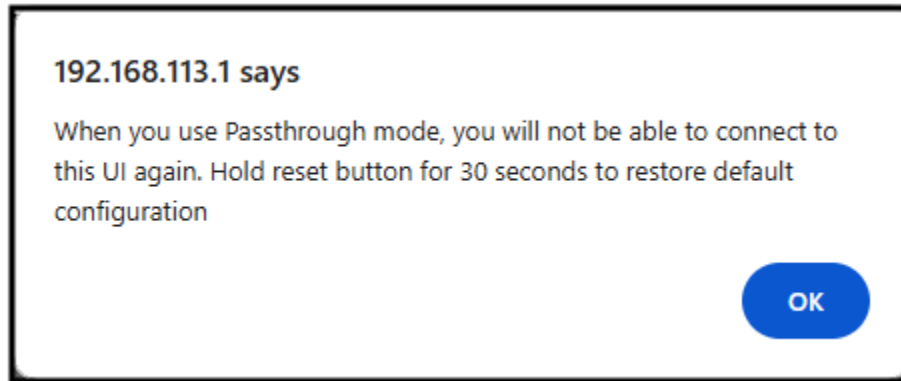


Figure 80: MegaFi 2 Configuration – Change modes (NAT or Passthrough)

6. Click on **Save & Apply** to confirm the change.

! **WARNING:** Internet access, wireless connectivity and/or access to the MegaFi 2 will become disrupted or unavailable after committing the mode change. Please allow 1-3 minutes for the configuration to apply.

7. Once Mission Control access is re-established, login again to Mission Control.

8. It is highly recommended to issue a **Reboot** (Section 3.9) to make sure the new setting takes hold. Please proceed with a **Reboot** at this time.

9. If the MegaFi 2 is set to **Passthrough Mode**, and the desired device, such as a firewall or router or a different computer with special software is to be connected to LAN port 1 on MegaFi 2 other than the computer used to implement the mode change, follow these added steps:

- 9a. Power down both the MegaFi 2 and the device that will interconnect with each other.
- 9b. Using an Ethernet patch cable, interconnect the MegaFi 2 LAN port 1 interface and the device's **WAN** port. If the device is another computer, connect to its Ethernet port.
- 9c. Power up both devices.
- 9d. Ensure that the connected device receives the appropriate IP address. Follow instructions from the device manufacturer to validate the IP address.

10. If connectivity becomes an issue to Mission Control, try one of the following actions to regain access to MegaFi 2:

- 10a. Refresh the web browser to Mission Control.
- 10b. Connect an Ethernet cable to an enabled LAN port (LAN port 1 if in Passthrough mode) on the MegaFi 2 and re-access Mission Control as usual through a web browser.
- 10c. Manually refresh connected computer IP address by opening a Windows PowerShell, or Command Prompt window on a PC with local access to MegaFi 2 and enter the following commands at the prompt:
 - **ipconfig /release** <enter> - this will release the existing IP addresses

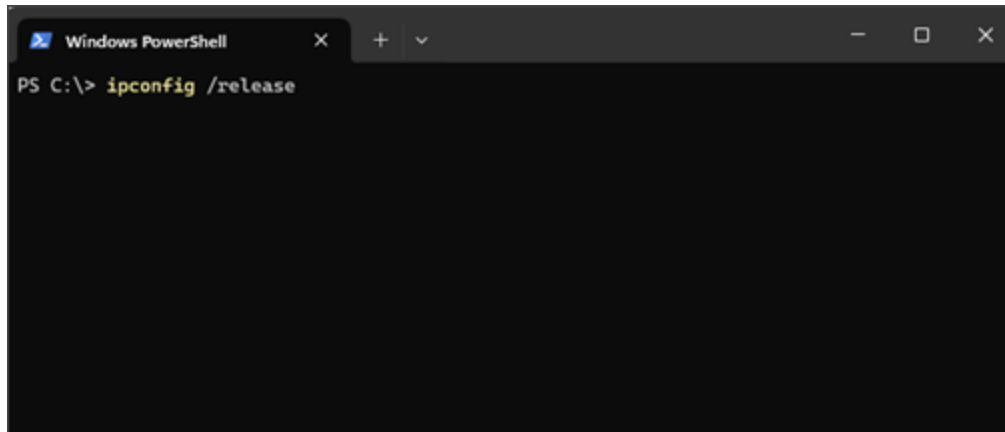


Figure 81: Windows PowerShell window – `ipconfig /release` <enter>

- **ipconfig /renew** <enter> - this will refresh the IP addresses on the connected computer.

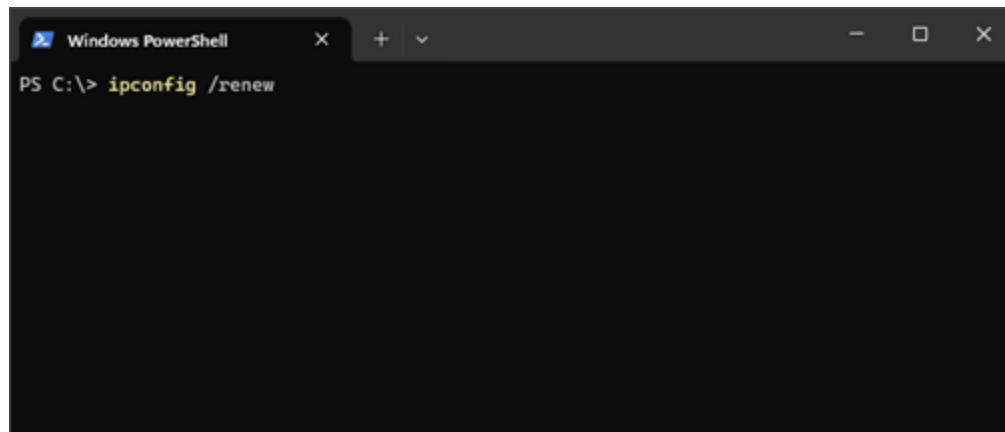


Figure 82: Windows PowerShell window – `ipconfig /renew` <enter>

11. When changes have been completed, and to prevent any more setting changes, click on the **Logout** button to exit out of Mission Control and be taken back to the Log In page.

3.12 Band Lock

In certain situations, the user may need to **Band Lock** to band 14 or 28. To do so, do the following in Mission Control:

- **Note:** Before committing to this change, please make sure to validate that band 14/28 is available in your area as not all areas are equipped for band 14/28.
1. Navigate to **Overview > System Settings** under **Admin Tools**.
 2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

The screenshot shows the 'Admin Tools' section with 'System Settings' selected. The settings are organized into two columns. The 'Expert Configuration' button is highlighted with an orange border.

System Settings	
Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

At the bottom right, there are three buttons: 'Save & Apply', 'Save', and 'Reset'.

Figure 83: System Settings – Expert Configuration button

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.

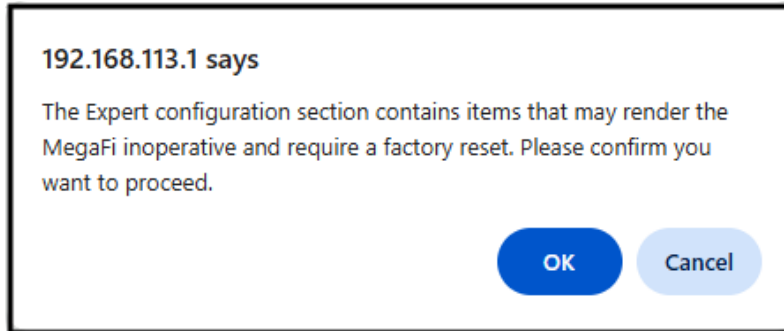


Figure 84: Confirmation to Enter Expert Configuration mode

- The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **System > Configuration**.

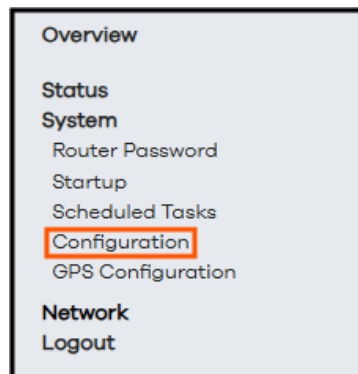


Figure 85: Navigation pane showing options available in Expert mode – Configuration

- Under the **Other** area, use the drop-down arrow next to **Band Lock** to select **LTE B14 Only** or **LTE B28 Only**. Choose the **Default Band Configuration** option to set back to default setting in which the device relies on the Network to choose the appropriate band.

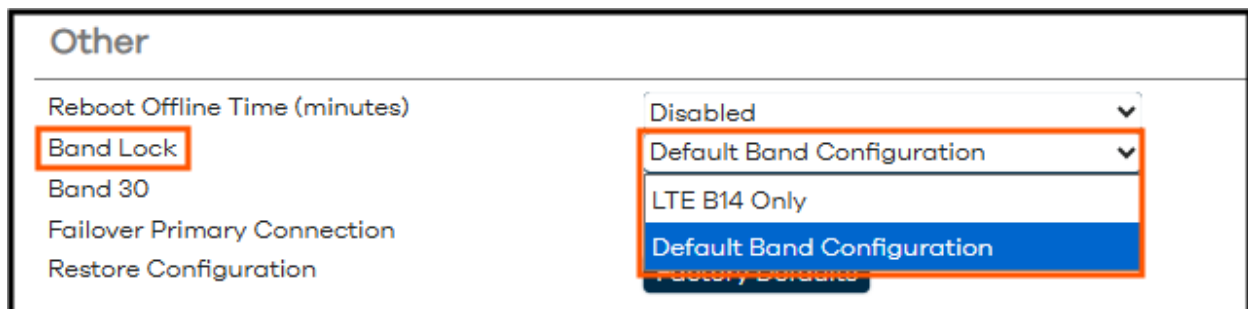


Figure 86: Band Lock Setting

- Click on **Save & Apply** to confirm the change.
- When changes have been completed, and to prevent any more setting changes, click on the **Logout** button to exit out of Mission Control and be taken back to the Log In page.

3.13 SSH Access

The user-enabled SSH instance (**Dropbear**) offers SSH network shell access and an integrated SCP server. Access to SSH on the MegaFi 2 is turned off by default. To enable command line **SSH Access** to the device, do the following in Mission Control.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

The screenshot shows the 'Admin Tools' section with a sub-tab for 'System Settings'. A list of configuration options is displayed on the left, each with a corresponding control on the right. The 'Expert Configuration' option is highlighted with an orange border, and its button is also highlighted.

Setting	Value/Action
Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

At the bottom right, there are three buttons: 'Save & Apply', 'Save', and 'Reset'.

Figure 87: System Settings – Expert Configuration

3. A pop-up window asks the user to confirm going into Expert Mode. Click **OK** to continue.

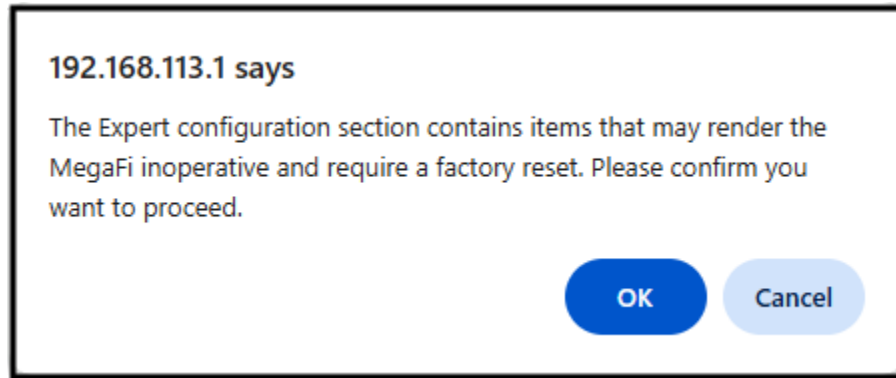


Figure 88: Confirmation to Enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Mode. Navigate to **System > Router Password > SSH Access**.

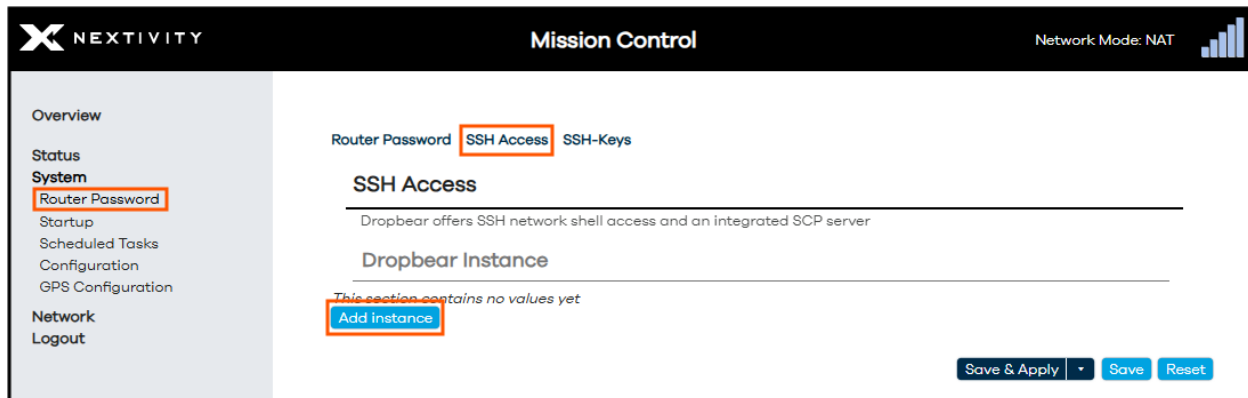


Figure 89: SSH Access – add new instance

5. Click on the **Add instance** button.
6. The **Interface** field will be pre-populated with the **LAN** interface by default and is the only option when needing local access to the device. The other options in the dropdown menu are **wan**, **wan6**, and **wwan** when remote **SSH Access** is required.
7. In the **Port** field, change the port number from the default **2022** to **22** (well-known SSH port for local access) or another port of your choosing that is not being used and hard for hackers to guess (typical for SSH wan access).
8. **Idle Timeout** is set to **300** seconds by default. Adjust for more or less time in seconds as needed.
9. All other settings are not required and are optional.
10. Click on **Save & Apply** to confirm changes.

SSH Access

Dropbear offers SSH network shell access and an integrated SCP server

Dropbear Instance

Interface: lan: 80 Delete

Port: 22

Listen only on the given interface or, if unspecified, on all

Password authentication: ☒ Allow SSH password authentication

Allow root logins with password: ☒ Allow the *root* user to login with password

Gateway Ports: ☐ Allow remote hosts to connect to local SSH forwarded ports

Idle Timeout: 300

Add instance

Save & Apply Save Reset

Figure 90: SSH Access – Change port number from 2022 to 22

11. Use your preferred SSH client to access MegaFi 2 on port **22** or whatever port configured and use **root** as the username along with the current router password.

➔ **Note:** The SSH password will be the same as the Router Password.

12. **Optional:** If remote **SSH Access** to the device is required and the device has a custom static/public IP address, do the following to open the appropriate **wan** interface:

- 12a. Within the **SSH Access** page, click on **Add instance**.
- 12b. Choose the appropriate **wan** interface from the **Interface** drop-down menu.
 - **wwan** – most typical choice to access SSH from the cellular network
 - **wan** – only select if the device has internet connection through wan port
 - **wan6** – currently not widely used
- 12c. Choose a port such as 46556 or something similar that is not the typical SSH port 22.
- 12d. It is recommended to leave the **Idle Timeout** set to **300** or less for **wan** access for security reasons.
- 12e. All other settings are not required and are optional.
- 12f. Click on **Save & Apply** to confirm changes.

3.14 GPS Output Configuration

This is where the user can configure GPS settings on MegaFi 2 for a **GPS Server**, **GPS Internal Reporting**, and **GPS Output** in Mission Control.

- **GPS Server** – This option provides GPS data to applications or clients that request it using a predefined server port.
- **GPS Internal Reporting** – This is how the MegaFi 2 will process GPS data and display it on-device only. The user can choose the format and the optional NMEA station code or TAIP ID and Rate. The default format setting is NMEA.
- **GPS Output** – This most widely used option transmits or shares GPS data to other systems using a host's IP address, a port number, a defined format (NMEA or TAIP), and a TCP/IP connection method using UDP as the protocol of choice. NMEA station code or TAIP ID and Rate are other options available in this area.

Nextivity Mission Control Network Mode: NAT

GPS Output Configuration
Configure GPS output in NMEA and TAIP format to hosts

GPS Server

Server Port

GPS Internal Reporting

Output Format NMEA Specify NMEA or TAIP output

NMEA station code or TAIP ID

Rate 1 Optional rate limit in seconds

GPS Output

This section contains no values yet
[Add output](#)

[Save & Apply](#) [Save](#) [Reset](#)

Figure 91: GPS Output Configuration page

3.14.1 GPS Server

To set up the MegaFi 2 to act like a **GPS Server** where GPS clients can request GPS data from, do the following in Mission Control.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

The screenshot shows the 'Admin Tools' section with 'System Settings' expanded. A list of settings is displayed on the left, and corresponding controls are on the right. The 'Expert Configuration' button is highlighted with an orange rectangle.

Setting	Value/Action
Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

At the bottom right, there are three buttons: 'Save & Apply', 'Save', and 'Reset'.

Figure 92: System Settings – Expert Configuration

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.

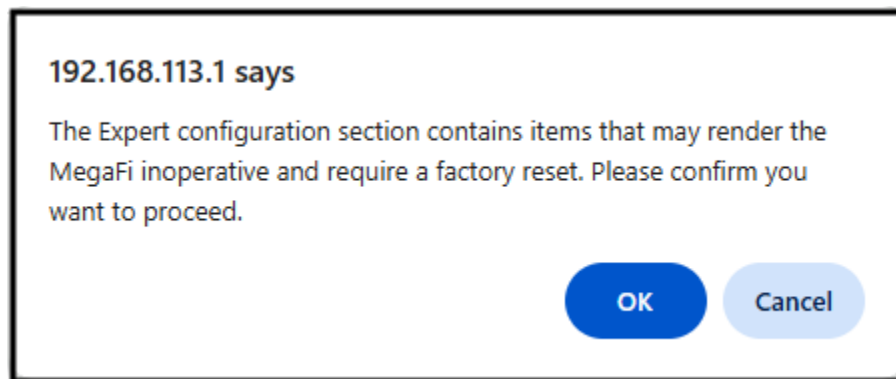


Figure 93: Confirmation to Enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **System > GPS Configuration > GPS Server**.
5. Enter the designated server port number for the **GPS Server** in the **Server Port** field, followed by hitting the **Enter** button. We entered **21000** in our example below:

Figure 94: GPS Server Port Configuration

6. Click on **Save & Apply** to confirm the **GPS Server** setting.

3.14.2 GPS Internal Reporting

This section modifies the **GPS Internal Reporting** format and how it is displayed on MegaFi 2. To modify these settings, do the following in Mission Control.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

Admin Tools

System Settings

Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

Figure 95: System Settings – Expert Configuration

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.

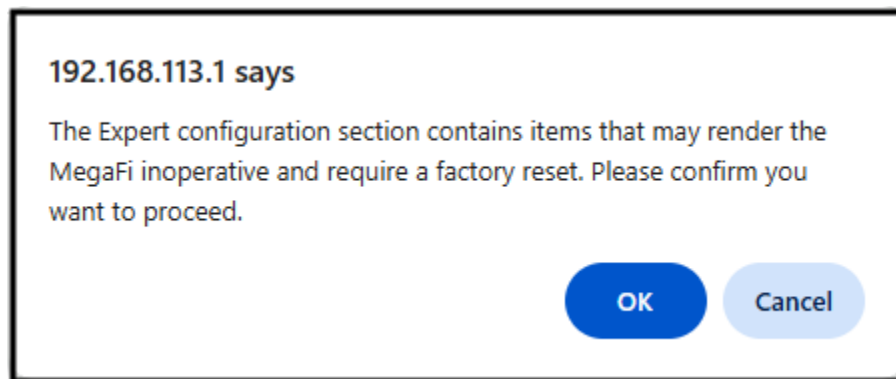


Figure 96: Confirmation to Enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **System > GPS Configuration > GPS Internal Reporting**.

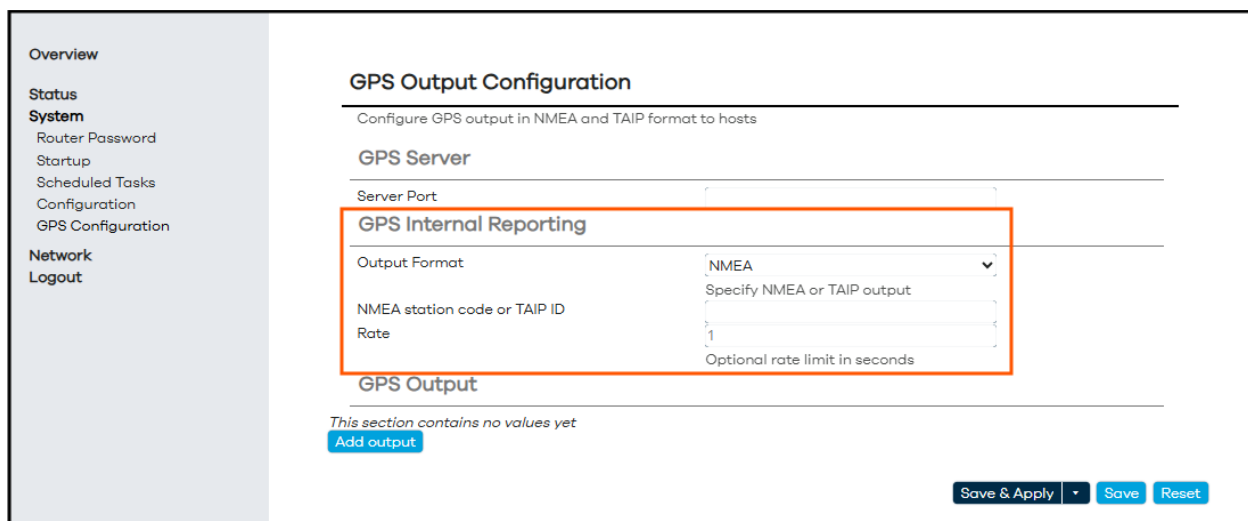


Figure 97: GPS Internal Reporting Configuration

5. **NMEA** is the default output format. Modify the following as needed for the MegaFi 2 to display the GPS message on-device.
 - 5a. **Output Format** – TAIP or NMEA
 - 5b. **NMEA station code or TAIP ID** (optional) – enter a valid alphanumeric value that is 4 characters long.
 - 5c. **Rate** (optional) – this parameter is in seconds. Leave as is or enter a rate between 1 – 3600.
6. Click on **Save & Apply** to confirm the **GPS Internal Reporting** settings.

7. To verify the on-device GPS settings, navigate to **Overview > System Settings** under **Admin Tools**.
8. Click on the **Expert Configuration** button to enter Expert Configuration mode.
9. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.
10. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **Status > Modem Status** and verify the GPS as shown below for either **NMEA** or **TAIP** format.

NEXTIVITY

Mission Control

Network Mode: NAT

Overview

Status

General

Routing

Firewall

System Log

Processes

Channel Analysis

Realtime Graphs

Modem Status

System

Network

Logout

Modem Status

System Name

SHIELD

Modem Software Version

AOR.001151_MOR.160005

IMEI

359172391092602

ICCID

89011003330135141132

IMSI

313100013545226

Phone Number

858.310.6948

Latitude

0.000000

Longitude

0.000000

NMEA/TAIP Position

\$GPGGA,034822.000,0000.00000,N,000000.00000,E,0,00,0.0,-17.0,M,17.0,M,0.000*4F

GPS UTC Timestamp

Wed May 21 2025 14:43:01 GMT-0700 (Pacific Daylight Time)

Mode

5G+

ID

245247561

PID

119

EARFCN

5330

Home Network MCC

313

Home Network MNC

100

Home Network Name

FirstNet

APN

nxtgenphone

Band

14

TAC

33659

RSRP

-85 dBm

RSRQ

-9 dB

RSSI

-58 dBm

SINR

-19.0 dB

TX Power

dBm

Figure 98: On-device GPS NMEA message format

NEXTIVITY

Mission Control

Network Mode: NAT

Overview

Status

General

Routing

Firewall

System Log

Processes

Channel Analysis

Realtime Graphs

Modem Status

System

Network

Logout

Modem Status

System Name	SHIELD	LTE Connection state	Connected
Modem Software Version	AOR.001151_MOR.160005	Signal Percentage	100%
IMEI	359172391092602	TX Bytes	67889568
ICCID	89011003330135141132	RX Bytes	287882809
IMSI	313100013545226	TX Packets	335853
Phone Number	858.310.6948	RX Packets	449730
Latitude	0.000000		
Longitude	0.000000		
NMEA/TAIP Position	>RPV13816+0000000+0000000000000032;ID=0000,*7C<		
GPS UTC Timestamp	Wed May 21 2025 14:44:56 GMT-0700 (Pacific Daylight Time)		
Mode	5G+	APN	nxtgenphone
ID	245247561	Band	14
PID	119	TAC	33659
EARFCN	5330	RSRP	-85 dBm
Home Network MCC	313	RSRQ	-9 dB
Home Network MNC	100	RSSI	-58 dBm
Home Network Name	FirstNet	SINR	-19.0 dB
		TX Power	dBm

Figure 99: On-device GPS TAIP message format

3.14.3 GPS Output

This section will enable the MegaFi 2 to transmit or share GPS data to a host running a GPS receiver or listener. Do the following to configure a **GPS Output** in Mission Control.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

The screenshot shows the 'Admin Tools' section with a sub-header 'System Settings'. Below this, there is a list of configuration options. The 'Expert Configuration' option is highlighted with an orange rectangle, and its corresponding button is also highlighted. The other options include Primary SIM, Physical SIM APN selection, Physical SIM custom APN, LAN IP, WAN/LAN Port Mode, Update Firmware, Backup Existing Configuration, Load Configuration from File, Change Password, Factory Defaults, Vehicle Shutdown Delay, and Reboot. At the bottom right, there are buttons for 'Save & Apply', 'Save', and 'Reset'.

System Settings	
Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

Save & Apply Save Reset

Figure 100: System Settings – Expert Configuration

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.

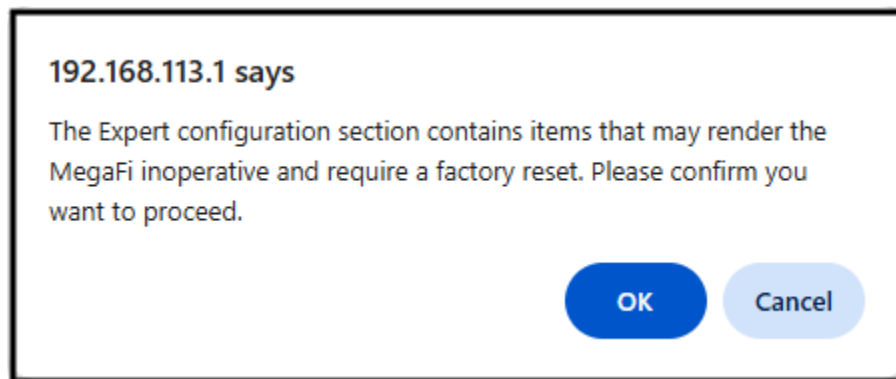


Figure 101: Confirmation to Enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **System > GPS Configuration > GPS Output**.

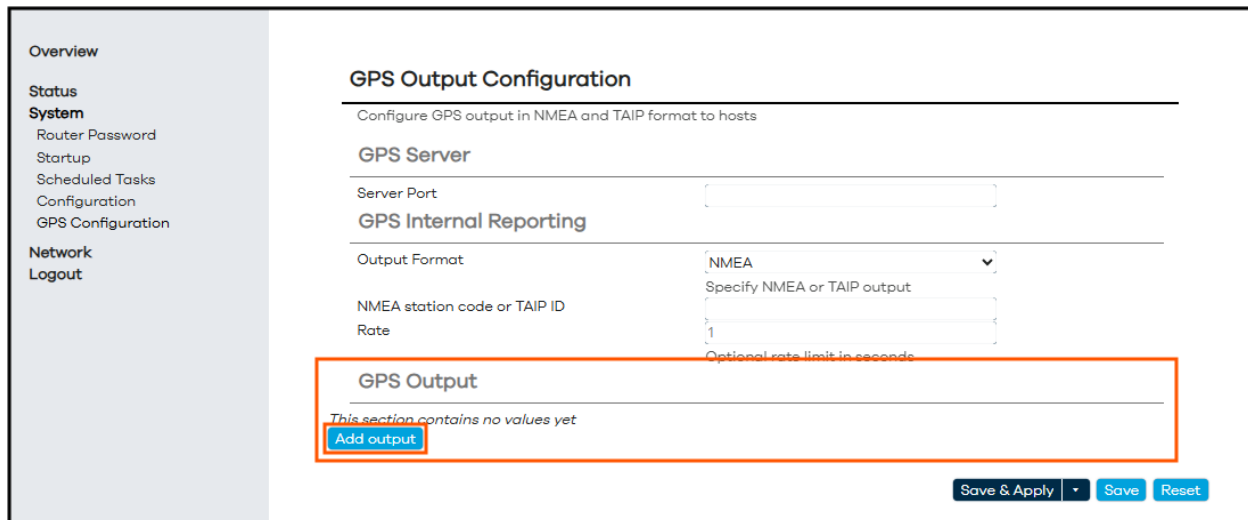


Figure 102: GPS Output Configuration – Add output

5. Select **Add output** and enter the following information:
 - 5a. **Host IP Address** – The IP address of the workstation or laptop computer running a GPS client.
 - 5b. **Port** – can be any network port number from 1024 on, as long as it is not blocked and not already in use (stay away from well-known port numbers in the range between 0-1023)
 - 5c. **Output Format** – TAIP or NMEA

5d. **NMEA station code or TAIP ID** (optional) – enter a valid alphanumeric value that is 4 characters long.

5e. **TCP/UDP** – UDP is typically the most widely used option. Check with your device to ensure what protocol it is set to.

5f. **Rate** – this parameter is in seconds. Leave as is or enter a rate between 1 – 3600.

- **Note:** In some cases, and for certain systems to receive the proper GPS data, it is best practice to enter a value of 1 in this field or the matching rate value set on the GPS receiver.

The screenshot shows the 'GPS Output' configuration window. It contains the following fields and controls:

- Host IP Address:** 192.168.113.104
- Port:** 5555
- Output Format:** TAIP (dropdown menu)
- NMEA station code or TAIP ID:** 1755
- TCP/UDP:** UDP (dropdown menu)
- Rate:** 1

Below the Rate field is the text 'Optional rate limit in seconds'. At the top right is a 'Delete' button. At the bottom left is an 'Add output' button. At the bottom right are 'Save & Apply', 'Save', and 'Reset' buttons.

Figure 103: GPS Output Configuration – Values for adding new output

- Click on **Save & Apply** to confirm the GPS Output settings.
- When changes have been completed, and to prevent any more setting changes, click on the **Logout** button to exit out of Mission Control and be taken back to the Log In page.

- **Note:** Multiple outputs can be configured to transmit and share GPS data to multiple clients. Just repeat this process as needed.

- **Note:** There is a **Delete** button to the top right of the **GPS Output**. If the output is no longer needed, click on the button to delete it followed by clicking on **Save & Apply**.

3.15 WAN/LAN Port Mode

The MegaFi 2 has two physical Ethernet ports. By default, the left port labeled **WAN/LAN2** is set to **WAN** mode. It can be set to function as a second LAN port if desired. To change the port mode on this port, do the following in Mission Control.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the drop-down menu next to **WAN/LAN Port Mode** and select **LAN**.

The screenshot shows the 'Admin Tools' section with 'System Settings' expanded. The 'WAN/LAN Port Mode' dropdown menu is open, showing 'WAN' as the current selection and 'LAN' as the selected option. Other settings visible include Primary SIM (physical SIM), Physical SIM APN selection (Automatic), Physical SIM custom APN (firstnet-broadband), LAN IP (192.168.113.1), Update Firmware, Backup Existing Configuration, Load Configuration from File (Load File button), Change Password (Change Password button), Factory Defaults (Factory Defaults button), Vehicle Shutdown Delay (30 Seconds), Expert Configuration (Expert Configuration button), and Reboot (Reboot button). At the bottom right are buttons for 'Save & Apply', 'Save', and 'Reset'.

Figure 104: WAN/LAN Port Mode options

3. Click on **Save & Apply** to confirm the **WAN/LAN Port Mode** setting.
- **Note:** The MegaFi 2 is capable of receiving **PoE** (Power over Ethernet) through the **WAN/LAN2** port. Check the MegaFi 2 User Manual for specifications.

3.16 LCD Configuration

The MegaFi 2 LCD display screen can be configured for the following settings:

LCD Setting	Fixed and Mobile Kit LCD Settings (Default)	LCD Settings - Other Options	MegaGo 2 LCD Settings (Default)
Screen Orientation	Portrait	Landscape	Landscape
Detail Level	Full	Minimal	Full
Turn off screen after (seconds)	600	Always On, custom (-1 – 3600)	Always On
Switch screen information (seconds)	15	1-60	15
Show Mission Control Password on the Display	Disabled	Enabled	Disabled

Table 3: LCD Screen Settings

To make any changes to the LCD Display screen, do the following in Mission Control.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

Admin Tools

System Settings

Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

Save & Apply Save Reset

Figure 105: System Settings – Expert Configuration

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.


192.168.113.1 says

The Expert configuration section contains items that may render the MegaFi inoperative and require a factory reset. Please confirm you want to proceed.

OK Cancel

Figure 106: Confirmation to Enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **System > Configuration > LCD Configuration**.

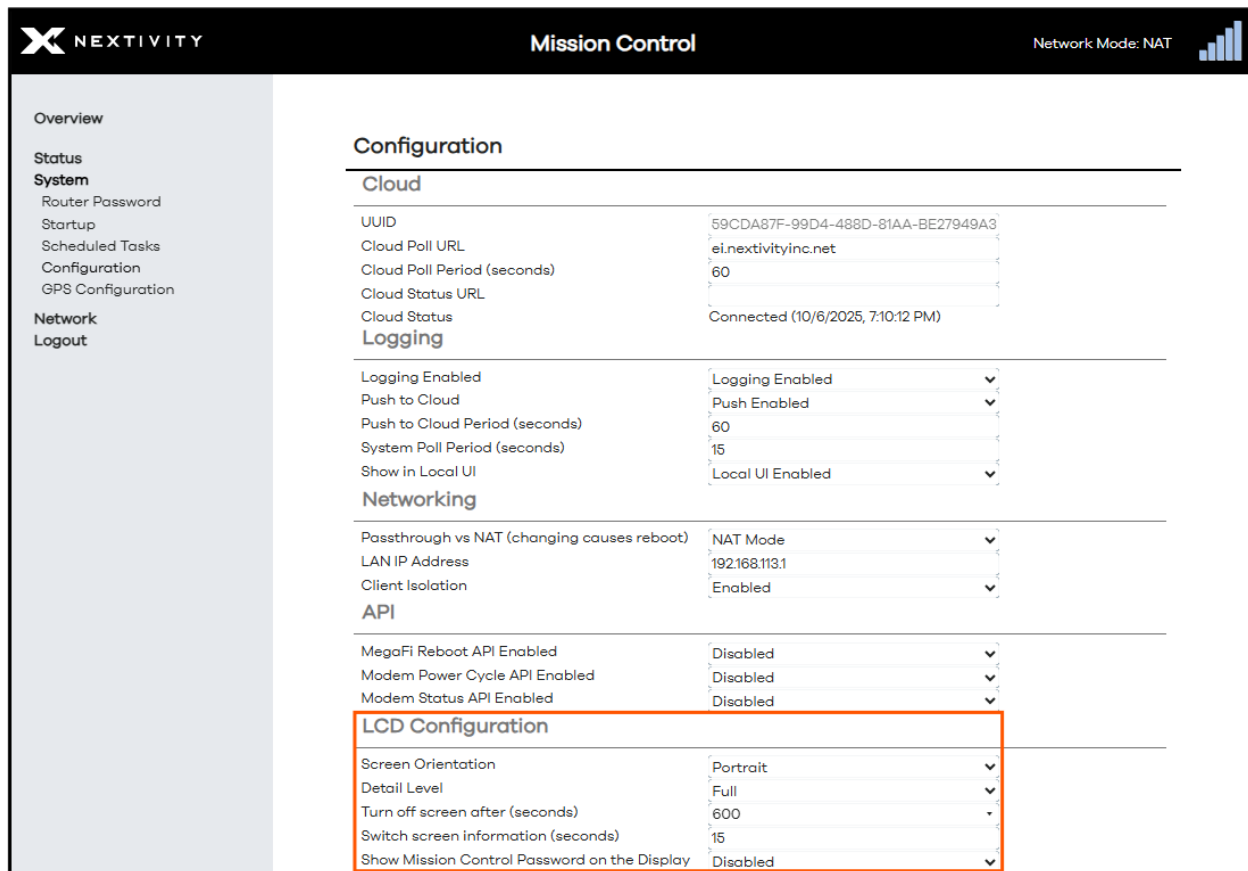

Nextivity Mission Control Network Mode: NAT

Configuration

Cloud

UUID	59CDA87F-99D4-488D-81AA-BE27949A3
Cloud Poll URL	el.nextivityinc.net
Cloud Poll Period (seconds)	60
Cloud Status URL	
Cloud Status	Connected (10/6/2025, 7:10:12 PM)

Logging

Logging Enabled	Logging Enabled
Push to Cloud	Push Enabled
Push to Cloud Period (seconds)	60
System Poll Period (seconds)	15
Show in Local UI	Local UI Enabled

Networking

Passthrough vs NAT (changing causes reboot)	NAT Mode
LAN IP Address	192.168.113.1
Client Isolation	Enabled

API

MegaFi Reboot API Enabled	Disabled
Modem Power Cycle API Enabled	Disabled
Modem Status API Enabled	Disabled

LCD Configuration

Screen Orientation	Portrait
Detail Level	Full
Turn off screen after (seconds)	600
Switch screen information (seconds)	15
Show Mission Control Password on the Display	Disabled

Figure 107: LCD Configuration – default settings

5. For settings with a drop-down menu arrow, click the arrow and choose the preferred setting.
 - **Screen Orientation** – select from Portrait (default) or Landscape
 - **Detail Level** – select from Full (default) or Minimal
 - **Turn off screen after (seconds)** – select from 600 (default), Always on, or enter a custom value in seconds between -1 and 3600.
 - **Show Mission Control Password on the Display** – Beginning in firmware release version 3.4.1, changing the default password enables this feature and no longer displays the password on the display screen. Select from **Disabled** (default) or **Enabled** to display the device password on the display screen.
6. To modify **Switch screen information (seconds)**, remove or delete the previous setting (default is set to 15) and enter a new setting between 1 and 60 in this field, and hit **Enter**. Otherwise, it will revert back to its default setting, or pre-configured setting.
7. Click on **Save & Apply** to confirm the change(s).

3.17 SNMP

Beginning with firmware release version 3.4.1, SNMP was implemented into Mission Control. Though it is currently in an experimental feature. Please use this section with caution. To configure SNMP settings, do the following in Mission Control:

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

Admin Tools

System Settings

Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

Save & Apply Save Reset

Figure 108: System Settings – Expert Configuration

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.

192.168.113.1 says

The Expert configuration section contains items that may render the MegaFi inoperative and require a factory reset. Please confirm you want to proceed.

OK Cancel

Figure 109: Confirmation to Enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **Network > SNMP**.



Figure 110: Navigation pane showing options available in Expert mode – Configuration

5. The following SNMP fields are available

Service Enabled – select from **Disabled** (default) or Enabled from the drop-down menu

User – the default username is “**nextivity123**”. Change the username as needed for your environment

Authentication Protocol – select from **SHA-512** (default), **MD5**, **SHA-1**, **SHA-224**, **SHA256**, **SHA-384** from the drop-down menu.

Encryption Protocol – select from **AES-256** (default), **DES**, **AES-128**, **AES-192**

Authentication Password – set to “**authpassword123**” by default. Change the authentication password as needed for your environment.

Encryption Password - set to “**privpassword123**” by default. Change the encryption password as needed for your environment.

The screenshot shows the Nextivity Mission Control web interface. The top header includes the Nextivity logo, the title "Mission Control", and the status "Network Mode: NAT" with a signal strength indicator. A sidebar on the left contains navigation links: Overview, Status, System, Network (highlighted), Interfaces, Wireless, Routing, DHCP and DNS, SNMP, Diagnostics, Firewall, and Logout. The main content area is titled "SNMP Settings (Experimental Feature)". It contains the following configuration fields:

Setting	Value
Service Enabled	Disabled
User	nextivity123
Authentication Protocol	SHA-512
Encryption Protocol	AES-256
Authentication Password	*****
Encryption Password	*****

At the bottom right of the configuration area are three buttons: "Save & Apply", "Save", and "Reset".

Figure 111: SNMP Settings

3.18 Client Isolation

Beginning with firmware release version 3.4.1, Client Isolation was implemented and enabled by default on both the main LAN subnet and Guest SSIDs. This feature in effect isolates client devices in which they cannot reach or communicate with each other within their respective network. To disable Client isolation for the main LAN subnet and let client devices reach or communicate with each other, do the following in Mission Control:

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

The screenshot shows the 'Admin Tools' section with 'System Settings' selected. A list of settings is displayed on the left, and their corresponding controls are on the right. The 'Expert Configuration' setting is highlighted with an orange box, and its button is also highlighted. At the bottom right, there are 'Save & Apply', 'Save', and 'Reset' buttons.

System Settings	
Primary SIM	physical SIM
Physical SIM APN selection	Automatic
Physical SIM custom APN	firstnet-broadband
LAN IP	192.168.113.1
WAN/LAN Port Mode	WAN
Update Firmware	Flash image...
Backup Existing Configuration	Save to File
Load Configuration from File	Load File
Change Password	Change Password
Factory Defaults	Factory Defaults
Vehicle Shutdown Delay	30 Seconds
Expert Configuration	Expert Configuration
Reboot	Reboot

Save & Apply Save Reset

Figure 112: System Settings – Expert Configuration

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.

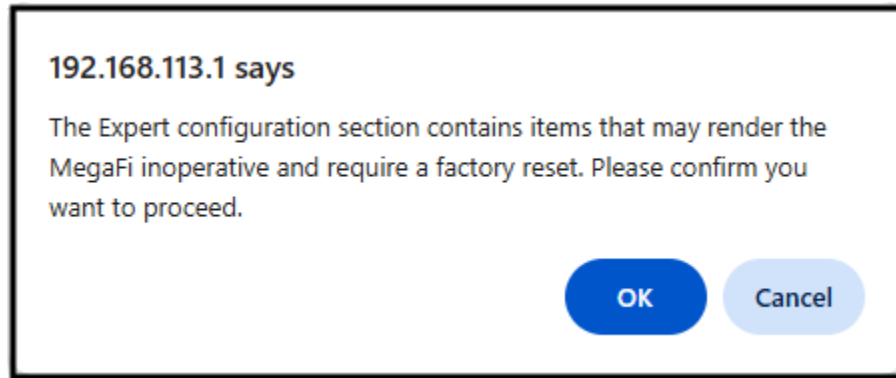



Figure 113: Confirmation to Enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **System > Configuration**.



Figure 114: Navigation pane showing options available in Expert mode – Configuration

5. Select Disabled from the drop-down menu to Disable Client isolation.

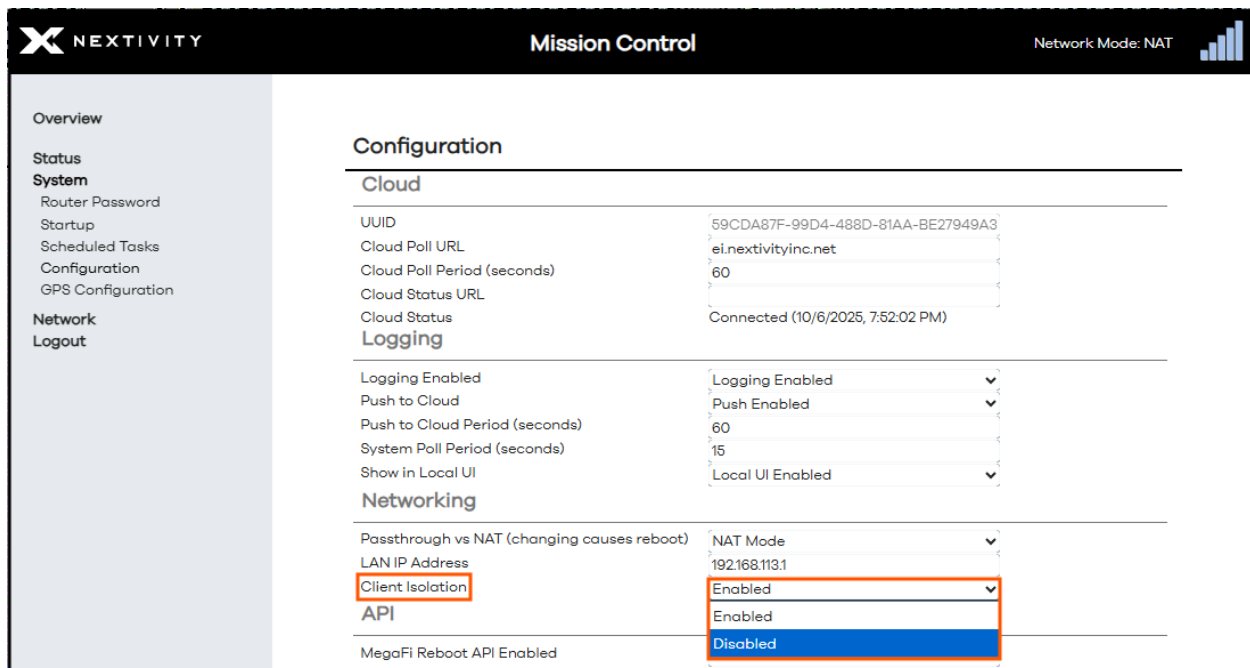

Nextivity Mission Control Network Mode: NAT

Overview

Status

System

- Router Password
- Startup
- Scheduled Tasks
- Configuration
- GPS Configuration

Network

Logout

Configuration

Cloud

UUID	59CDA87F-99D4-488D-81AA-BE27949A3
Cloud Poll URL	ei.nextivityinc.net
Cloud Poll Period (seconds)	60
Cloud Status URL	
Cloud Status	Connected (10/6/2025, 7:52:02 PM)

Logging

Logging Enabled	Logging Enabled
Push to Cloud	Push Enabled
Push to Cloud Period (seconds)	60
System Poll Period (seconds)	15
Show in Local UI	Local UI Enabled

Networking

Passthrough vs NAT (changing causes reboot)	NAT Mode
LAN IP Address	192.168.113.1
Client Isolation	Enabled

API

MegaFi Reboot API Enabled	Disabled
---------------------------	----------

Figure 115: Client Isolation

- Click on **Save & Apply** at the bottom to confirm the change.

3.19 Failover Primary Connection

Failover Primary Connection is set to **WAN – Internet Connection** by default. If you have both a WAN and WWAN connection, the physical WAN connection will be the preferred connection but if this connection is lost, the device will failover to the WWAN interface or cellular modem connection (**WWAN – Modem Connection**). If you prefer the WWAN interface, to be your primary connection, do the following in Mission Control:

➤ **Note:** If you are only using the WWAN connection (most typical setup), there is no configuration needed and this setting can be left at default setting.

1. Navigate to **Overview > System Settings** under **Admin Tools**.
2. Click on the **Expert Configuration** button to enter Expert Configuration mode.

The screenshot shows the 'Admin Tools' section with 'System Settings' expanded. The settings list includes:

- Primary SIM: physical SIM
- Physical SIM APN selection: Automatic
- Physical SIM custom APN: firstnet-broadband
- LAN IP: 192.168.113.1
- WAN/LAN Port Mode: WAN
- Update Firmware: Flash image...
- Backup Existing Configuration: Save to File
- Load Configuration from File: Load File
- Change Password: Change Password
- Factory Defaults: Factory Defaults
- Vehicle Shutdown Delay: 30 Seconds
- Expert Configuration: Expert Configuration** (highlighted with a red rectangle)
- Reboot: Reboot

At the bottom right, there are buttons for 'Save & Apply', 'Save', and 'Reset'.

Figure 116: System Settings – Expert Configuration

3. A pop-up window asks the user to confirm going into Expert Configuration mode. Click **OK** to continue.

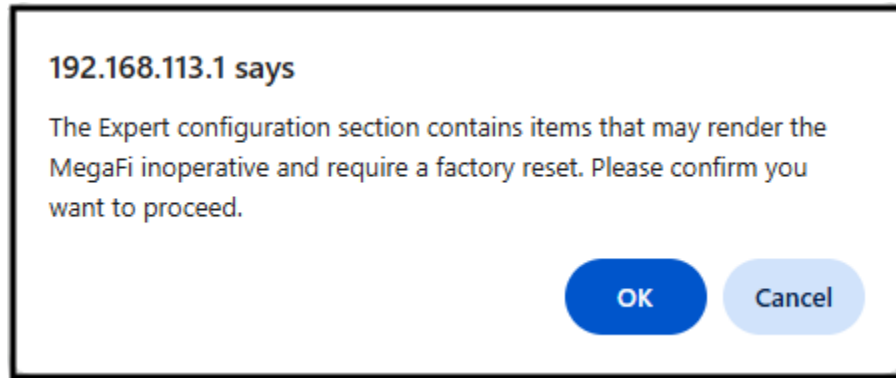


Figure 117: Confirmation to Enter Expert Configuration mode

4. The left-pane menu exposes pages only available in Expert Configuration mode. Navigate to **System > Configuration**.

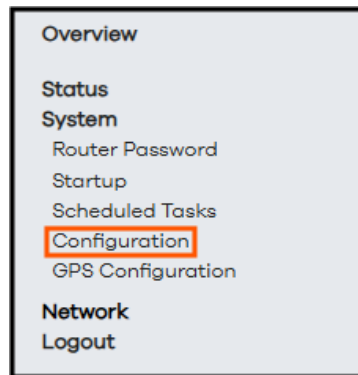


Figure 118: Navigation pane showing options available in Expert mode – Configuration

5. Scroll down to **Other** section and select **WWAN – Modem Connection** from the drop-down menu for **Failover Primary Connection**.

The screenshot shows the Nextivity Mission Control interface. On the left is a sidebar with navigation links: Overview, Status, System (Router Password, Startup, Scheduled Tasks, Configuration, GPS Configuration), Network, and Logout. The main area is titled 'Configuration' and contains several sections: Cloud, Logging, Networking, API, LCD Configuration, and Other. The 'Failover Primary Connection' dropdown under the 'Other' section is highlighted with a red box. The selected option, 'WAN - Internet Connection', is highlighted with a blue box. Other options in the dropdown include 'WAN - Internet Connection' and 'WWAN - Modem Connection'.

Configuration	
Cloud	
UUID	59CDA87F-99D4-488D-81AA-BE27949A3
Cloud Poll URL	ei.nextivityinc.net
Cloud Poll Period (seconds)	60
Cloud Status URL	
Cloud Status	Connected (10/7/2025, 8:03:41 AM)
Logging	
Logging Enabled	Logging Enabled
Push to Cloud	Push Enabled
Push to Cloud Period (seconds)	60
System Poll Period (seconds)	15
Show in Local UI	Local UI Enabled
Networking	
Passthrough vs NAT (changing causes reboot)	NAT Mode
LAN IP Address	192.168.113.1
Client Isolation	Enabled
API	
MegaFi Reboot API Enabled	Disabled
Modem Power Cycle API Enabled	Disabled
Modem Status API Enabled	Disabled
LCD Configuration	
Screen Orientation	Portrait
Detail Level	Full
Turn off screen after (seconds)	600
Switch screen information (seconds)	15
Show Mission Control Password on the Display	Disabled
Other	
Reboot Offline Time (minutes)	Disabled
Band Lock	Default Band Configuration
Band 30	Enabled - Fixed applications
Failover Primary Connection	WAN - Internet Connection
Restore Configuration	WAN - Internet Connection
Build Information	WWAN - Modem Connection

Figure 119: Failover Primary Connection

- Click on **Save & Apply** at the bottom to confirm the change.